


WC88 PTO WOOD CHIPPER

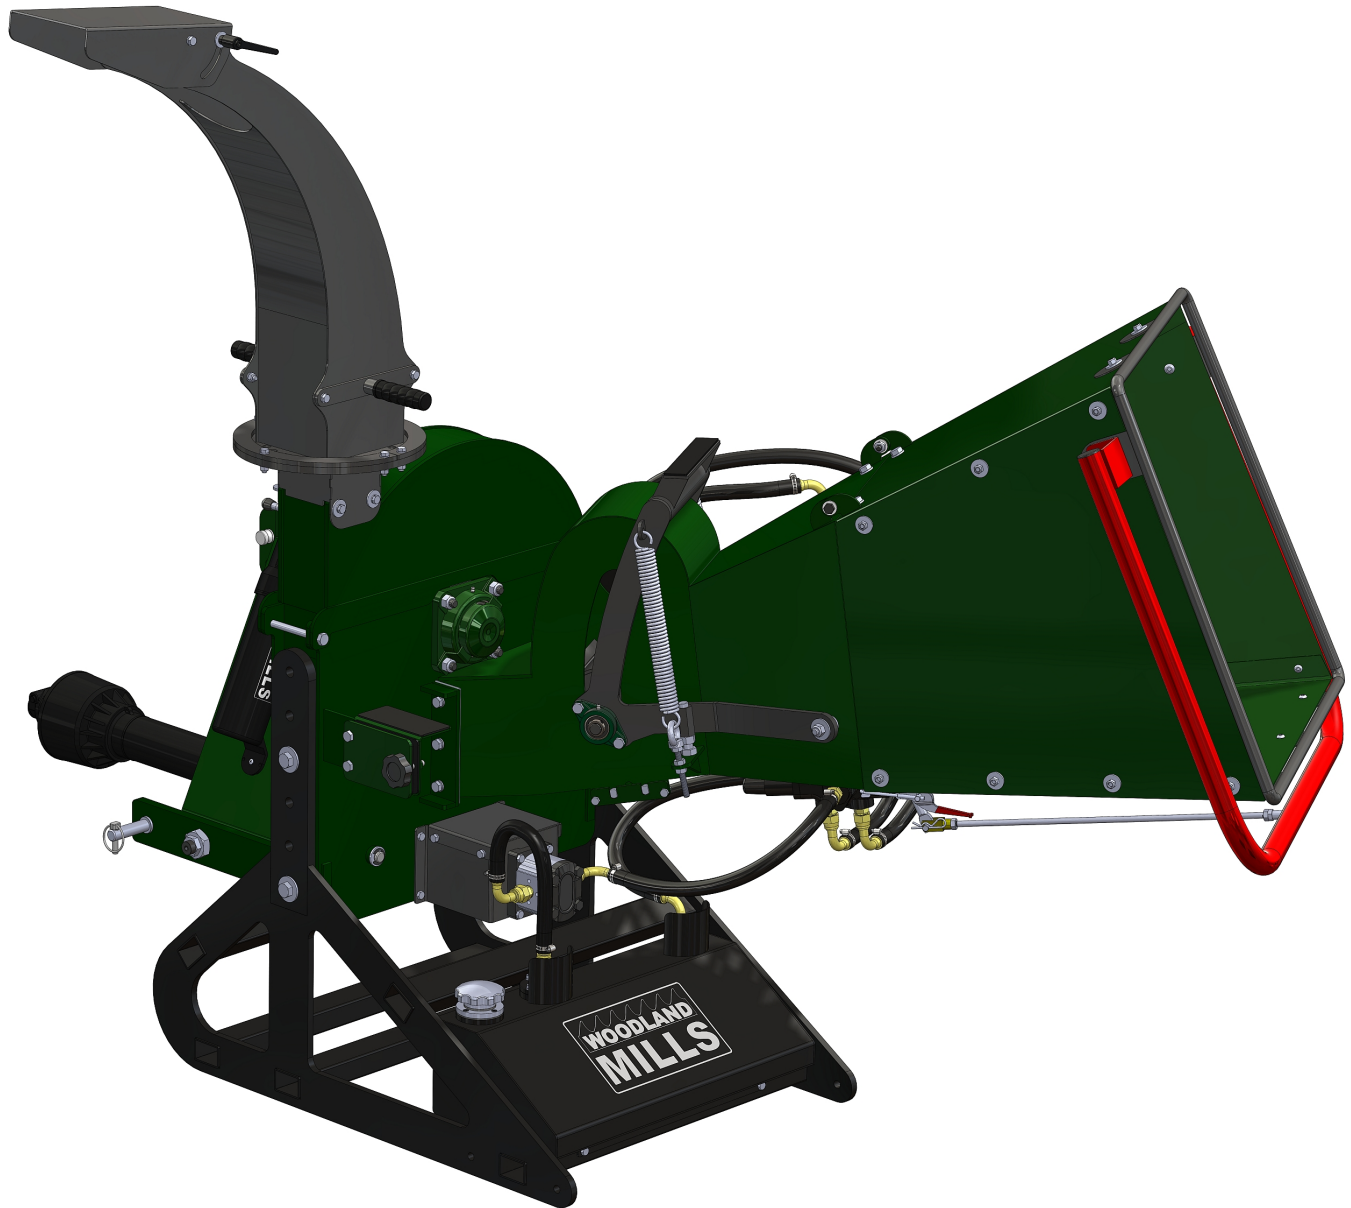

OPERATOR'S MANUAL



This page intentionally left blank.



TABLE OF CONTENTS

TABLE OF CONTENTS	1
INTRODUCTION	3
INTENDED USE	3
SAFETY GUIDELINES	4
ROTATING DRIVELINES	5
PERSONAL SAFETY	6
WORK AREA	7
TOOL USE AND CARE	8
TECHNICAL SPECIFICATIONS	9
i. OVERALL DIMENSIONS—OPERATING STATE	10
ii. OVERALL DIMENSIONS—STORED STATE	11
iii. 3-POINT HITCH DIMENSIONS	12
ASSEMBLY	13
1. TOOLS REQUIRED	13
2. UNPACKING	14
A. UNBOXING THE CRATE	14
B. REMOVING THE SKID	15
3. INFEED CHUTE	16
A. TOP PANEL	16
B. SIDE PANELS AND BOTTOM PANEL	17
C. EDGE BAR	18
D. CONTROL ARM	20
E. CONTROL ARM LINKAGE	21
4. DISCHARGE CHUTE	23
TRIMMING THE PTO SHAFT	24
ADJUSTING THE BASE HEIGHT (IF REQUIRED)	27
OPERATION	30
1. PRE-START UP CHECKLIST	30
2. START UP	31
3. INFEED ROLLER CONTROL	32



4. DISCHARGE CHUTE	33
5. CHIPPING	34
6. STOPPING	34
6. CHAINSAW HOLDER	35
MAINTENANCE	36
REPLACING BLADES	36
BLADE SHARPENING	38
SETTING THE BED PLATE GAP	39
ADJUSTING THE DRIVE BELTS' TENSION	41
REPLACING THE DRIVE BELTS	43
ADJUSTING THE RED CONTROL ARM	45
GREASING BEARINGS AND PTO SHAFT	46
STORAGE	48
TROUBLESHOOTING	49
PARTS LIST	50
EXPLODED ASSEMBLY VIEWS	54
COMPLETE ASSEMBLY	54
BASE	55
LOWER FLYWHEEL HOUSING [FRONT]	56
LOWER FLYWHEEL HOUSING [REAR]	57
FLYWHEEL	58
INFEED CHUTE	59
DISCHARGE CHUTE	60
HYDRAULIC LINES	61
PTO SHAFT	62
NOTES	63



INTRODUCTION

Congratulations on your purchase and welcome to Woodland Mills! This manual gives you the necessary information about your machine so you will be able to use it properly. The entire manual must be read and understood before you start using the machine. If any questions should arise that are not covered by this manual, please contact Woodland Mills Inc.

OWNER'S RECORD

Please take a moment to record the following information about your wood chipper. If you need to call for assistance, please be ready to provide your model and serial numbers. This information will allow us to help you more quickly when you call.

MODEL NUMBER

SERIAL NUMBER

DATE OF PURCHASE

This machine is designed for certain applications only. We strongly recommend that this machine is not modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the machine until you have first contacted us to determine if it can or should be performed on the product.

For technical questions and replacement parts, please contact Woodland Mills Inc.

INTENDED USE

Woodland Mills wood chippers are designed for acreage owners to aid in chipping natural, untreated wood only. Materials that are processed may contain chemicals or by-products that could corrode the machine or damage it, resulting in safety concerns.



SAFETY GUIDELINES

****SAVE THESE INSTRUCTIONS****

- Do not operate this machine until this manual has been read and fully understood; serious injury or severe machine damage could occur if these safety warnings are ignored.
- Never allow more than one person to operate this machine at one time. If two people are working together it will increase the chance of your workmate engaging the machine or causing you to fall into the machine.
- If your hand is ever near the chipping or feeding area, serious injury could occur.
- Never place your hands or feet on or near the machine while it is engaged.
- Never place your hands or feet on or near the material while it is feeding.
- DO NOT wear loose clothing, jewelry, or anything that can catch a branch that is feeding into the wood chipper.
- DO NOT stand directly in front of the infeed chute when loading material into the hopper; always load from the side of the hopper. This will help prevent any part of your body from being pulled into the machine.
- Always wear safety hearing protection, eye wear, gloves, and long pants when operating the wood chipper.
- Never place your hands beyond the opening of the hopper while the wood chipper is running.
- Never allow children, disabled, or untrained persons to operate the wood chipper.
- Do not operate the wood chipper near bystanders, public roads, or anywhere that debris may travel far enough to injure another person.
- Never move the wood chipper while it is running.
- Shut off the tractor and allow the wood chipper to come to a complete stop before removing any debris.
- Never perform any maintenance or repair while the wood chipper is running.



ROTATING DRIVELINES

****STAY CLEAR OF ROTATING DRIVELINES****



- Entanglement in rotating driveline can cause serious injury or death.
- Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields spin freely.
- Wear close-fitting clothing.
- Shut off the engine and be sure the PTO driveline has stopped before making adjustments, connections, or cleaning out PTO-driven equipment.
- Do not install any adapter device between the tractor and the primary implement PTO drive shaft that would allow a 000 RPM tractor shaft to power a 540 RPM implement at speeds higher than 540 RPM.
- Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft.



WARNING!

Read and understand all instructions. Failure to properly follow the instructions listed below may result in serious injury or death.



WARNING!

The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator.



PERSONAL SAFETY

- **Stay alert**, watch what you are doing and use common sense when operating a power tool. Do not use a power tool when you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- **Dress properly.** Do not wear loose clothing, dangling objects, or jewelry. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts. Air vents often cover moving parts and should be avoided.
- **Use safety apparel and equipment.** Use safety goggles or safety glasses with side shields that comply with current national standards, or when needed, a face shield. Use a dust mask in dusty work conditions. This applies to all persons in the work area. Also use non-skid safety shoes, a hardhat, gloves, dust collection systems, and hearing protection when appropriate.
- **Do not over reach.** Keep proper footing and balance at all times.
- **Remove adjusting keys or wrenches** before connecting to the power supply or turning on the tool. A wrench or key that is left attached to a rotating part of the tool may result in personal injury.
- **Never remove or install blades, conduct any maintenance, or make any other adjustments while the tractor engine is running.** Always shut the engine off, remove the ignition key, and disconnect the PTO shaft prior to carrying out any of the aforementioned procedures. Consult your tractor's manual for safe shutdown procedures to prevent accidental ignition.



WORK AREA

- **Keep work area clean**, free of clutter and well lit. Cluttered and dark work areas can cause accidents.
- **Do not use your wood chipper where there is a risk of causing a fire or an explosion;** e.g. in the presence of flammable liquids, gasses, or dust. Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders** away while operating a power tool. Distractions can cause you to lose control, therefore, visitors should remain a safe distance from the work area.
- **Be aware of all power lines, electrical circuits**, water pipes and other mechanical hazards in your work area, particularly those hazards below the work surface hidden from the operator's view that may be unintentionally contacted and cause personal harm or property damage.
- **Be aware of your surroundings.** Using power tools in confined work areas may put you dangerously close to cutting tools and rotating parts.




TOOL USE AND CARE

- **Always be sure the operator is familiar** with proper safety precautions and operation techniques before using machine.
- **Do not force the tool.** Tools do a better and safer job when used in the manner for which they are designed.
- **Turn off the tractor engine** and disconnect the PTO shaft before servicing, adjusting, installing accessories or attachments, or storing. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Storing the wood chipper.** When the wood chipper is not in use, store it in a dry, secure place or keep it well covered and out of reach of children. Inspect the wood chipper for good working condition prior to storage and before re-use.
- **Maintain your wood chipper.** It is recommended that the general condition of the wood chipper be examined before it is used. Keep your wood chipper in good repair by adopting a program of conscientious repair and maintenance in accordance with the recommended procedures found in this manual. If abnormal vibration or noise occurs, turn the wood chipper off immediately and have the problem corrected before further use.
- **Keep blades sharp and clean.** Properly maintained wood chipper blades are less likely to bind and make feeding-in brush easier.
- **Cleaning and Lubrication.** Use only soap and a damp cloth to clean your wood chipper. Many household cleaners are harmful to plastic and rubber components on the wood chipper.
- **Use only accessories that are recommended** by the manufacturer for your model. Suitable accessories for another wood chipper may create an injury risk when used on this wood chipper.
- **Always** operate the machine with all safety devices and guards in place and in working order. DO NOT modify or make changes to safety devices. DO NOT operate the machine if any safety devices or guards are missing or inoperative.
- **Never leave wood chipper running unattended.**
- **Never use the equipment to chip brush with trunks exceeding 8" (203 mm) in diameter** or for any purpose other than chipping brush as described in this manual.




TECHNICAL SPECIFICATIONS

Component	WC88 Specification
Drive System	PTO
Transport	3-Point Hitch
Minimum HP Required (at PTO)	35 hp
In-Feed System	Hydraulic
Hydraulic Oil	ISO 32 (ISO 46 for warmer climates)
Hydraulic Tank Volume	5 gal [19 L]
Hydraulic Requirement (Tractor)	None. Self contained.
PTO Shear Bolt	M8 X 50 mm Hex Bolt - Class 8.8 (Grade 5)
Blade Quantity and Dimensions	Four (4); 4.45 X 2.72 X 5/16" [113 X 69 X 8 mm]
Blade Hardware	M10 X 40 mm Flat Head, M10 Lock Nuts - Class 10.9
Infeed Roller Diameter	7-11/16" [195 mm] at Tooth Tip
Infeed Chute Dimensions (H X W)	27-9/16" X 25-11/16" [700 mm x 652 mm]
Product Weight	1050 lb [475 kg]
Product Shipping Weight	1160 lb [525 kg]

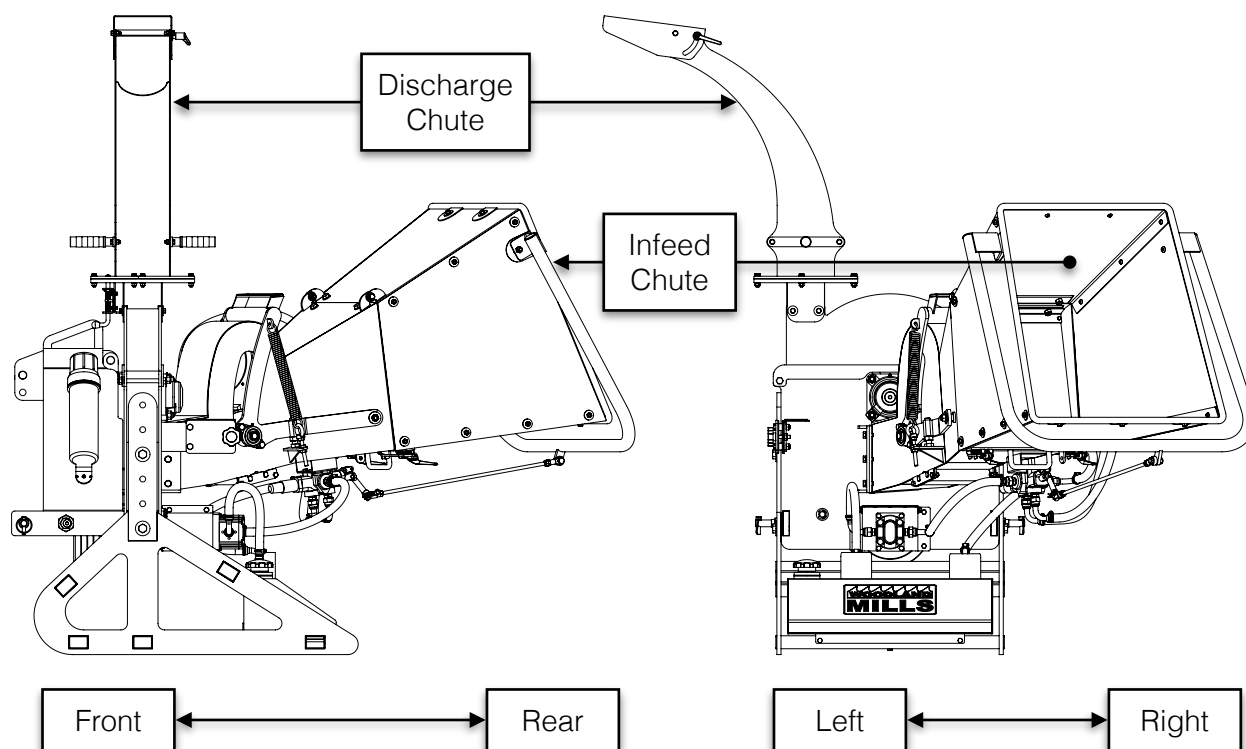




i. OVERALL DIMENSIONS—OPERATING STATE

Because the base offers up to 6 in (152 mm) of total vertical adjustment in 3 in (76 mm) increments, the overall height can vary by this amount as well.

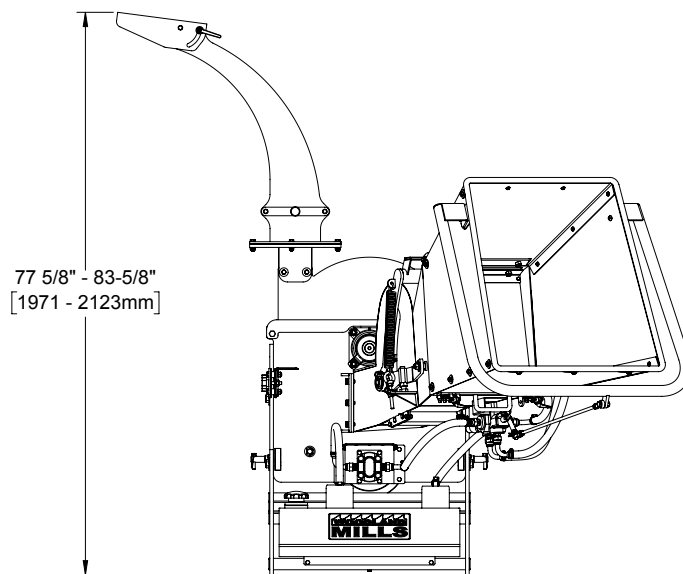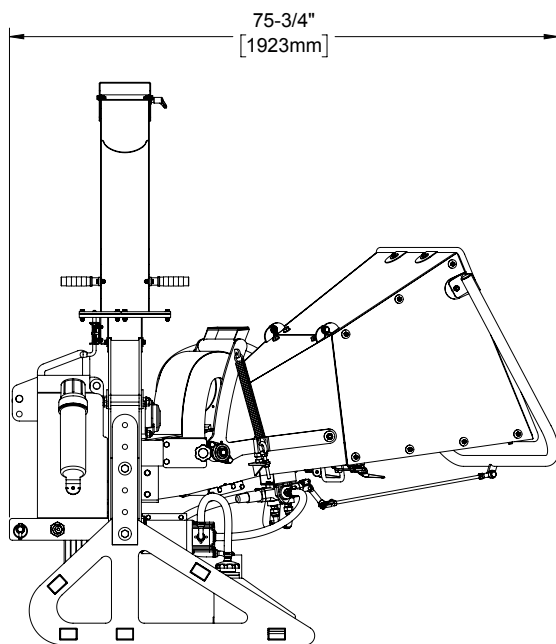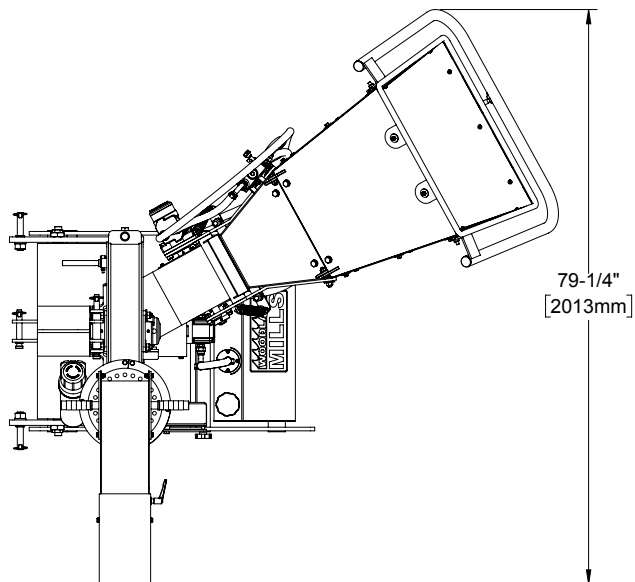

ii. OVERALL DIMENSIONS—STORED STATE


The discharge chute deflector must be pointing down in order to clear the control arm on the infeed chute when it is flipped upward for storage. See section, **Storage**, for more information.

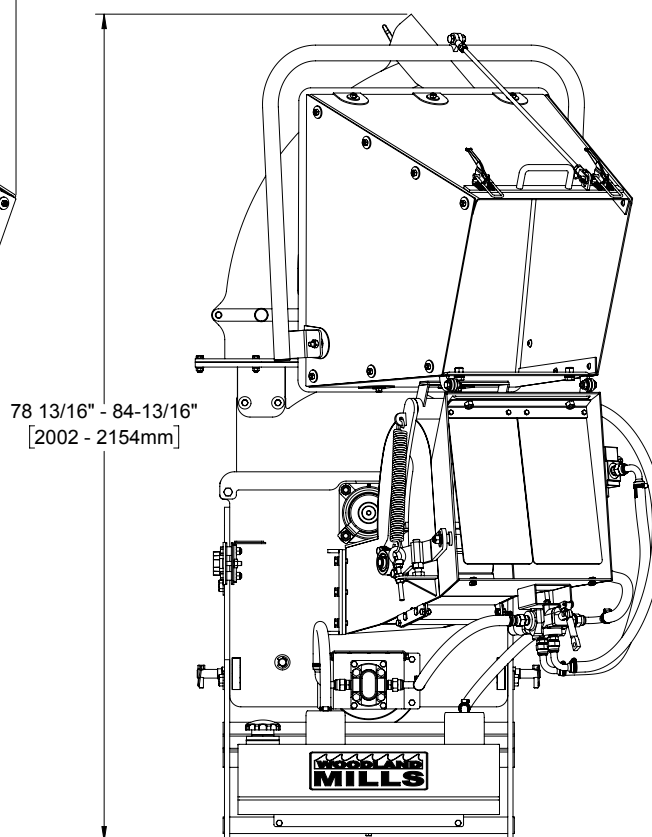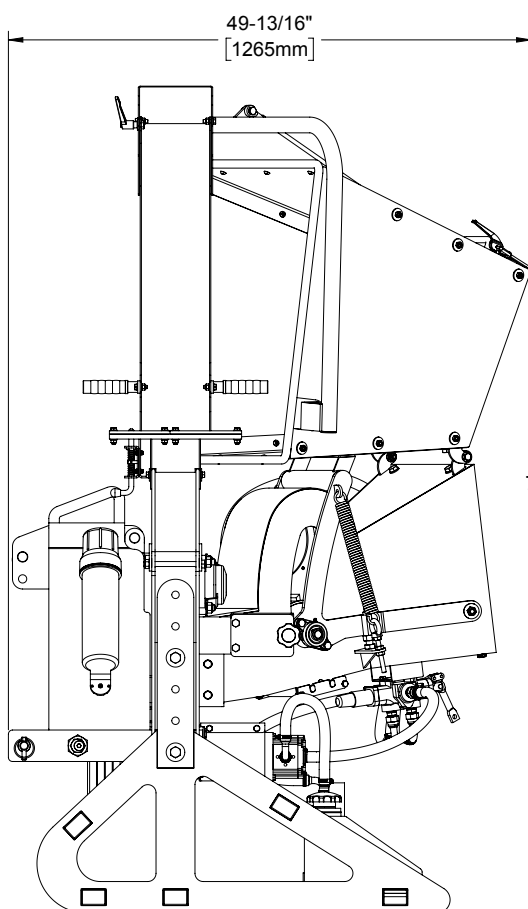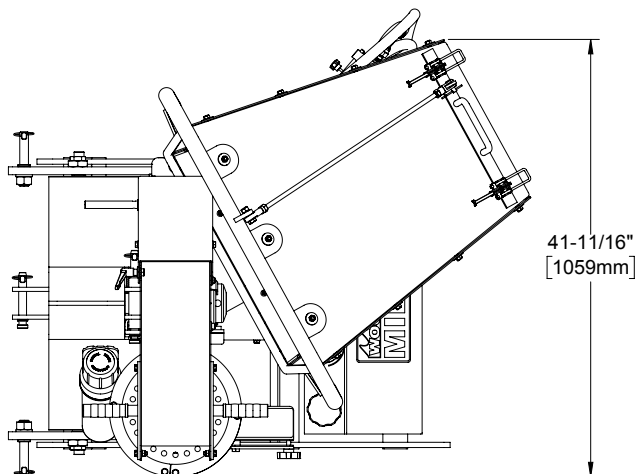

iii. 3-POINT HITCH DIMENSIONS

The wood chipper 3-point hitch is a *Category 1* system design to work with tractors in the horsepower range of 35-100+ hp. Top link pin is $\frac{3}{4}$ " (19 mm) diameter and the lift arm pins are $\frac{7}{8}$ " (22 mm) diameter.

Discharge chute removed from views for clarity.

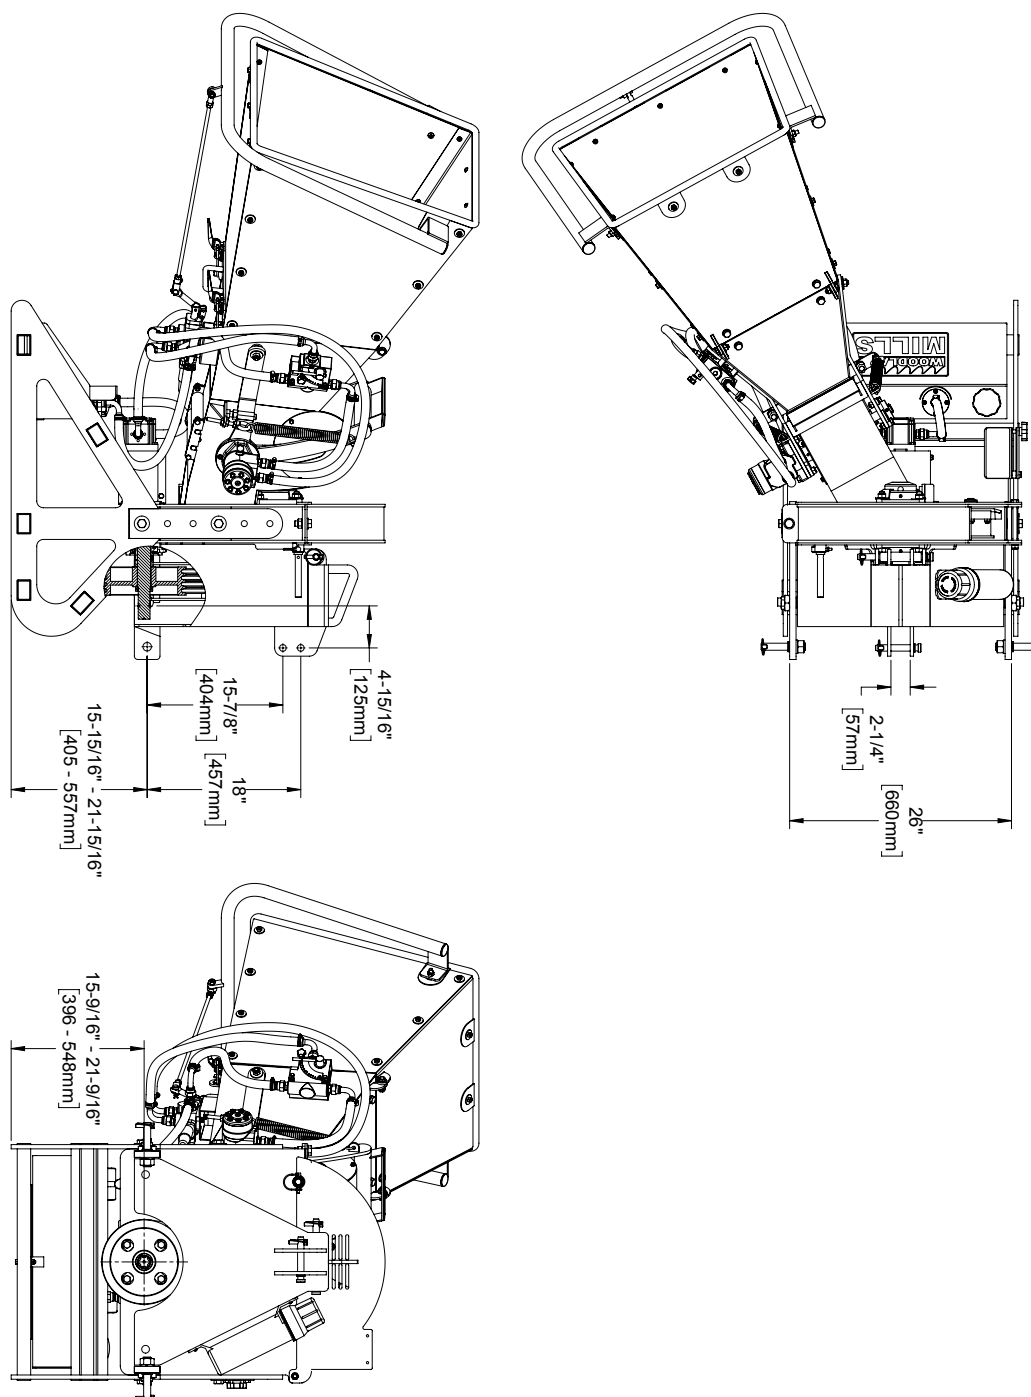


ASSEMBLY

1. TOOLS REQUIRED

Tool	Specification
Wrench/Socket	13 mm (2X)
Wrench/Socket	16 mm (2X)
Wrench/Socket	17 mm
Wrench/Socket	24 mm or Adjustable Wrench
Wrench	27 mm or Adjustable Wrench
Hex Key	Set of Metric Hex Keys (e.g. 2-10 mm)
Hacksaw*	Any metal-cutting saw (Sawzall, etc.)

* Only if PTO shaft requires trimming. See [*Trimming the PTO Shaft*](#) section for more detail.

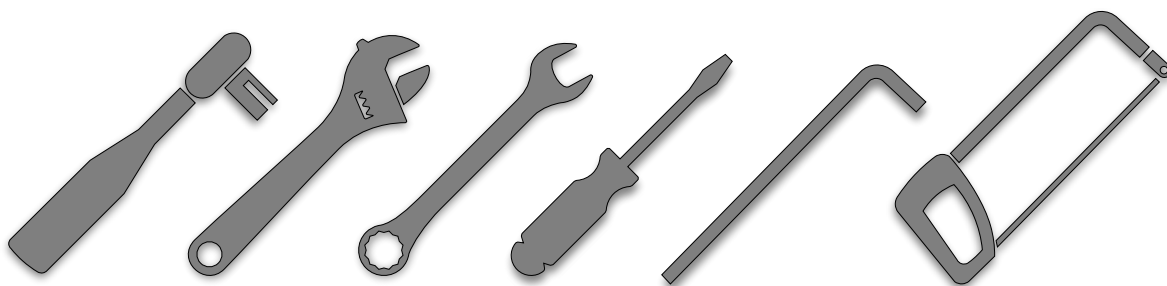




2. UNPACKING

A. UNBOXING THE CRATE


Unpack the contents of the crate by first cutting the nylon strapping and then remove the cardboard top and sides. Remove the four (4) M8 hex bolts and nuts located at each bottom corner of the crate and then lift it off the skid. Discard the crate.

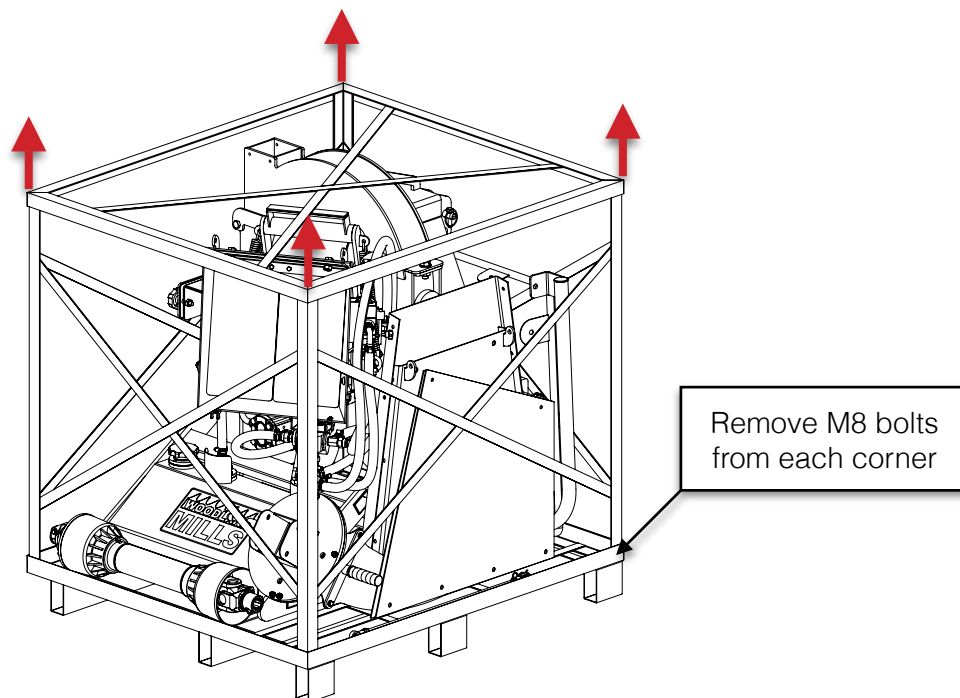

Remove all the loose components from the skid (infeed chute panels, control arm, edge bar, control arm linkage, discharge chute, discharge chute handles, PTO shaft) and set them to the side. Leave the wood chipper on the skid.


Hardware for assembly is stored inside the manual tube.

Note that the wood chipper is shipped dry (i.e. no hydraulic fluid) from the factory. See the **Technical Specifications** section for the volume and type of oil required.


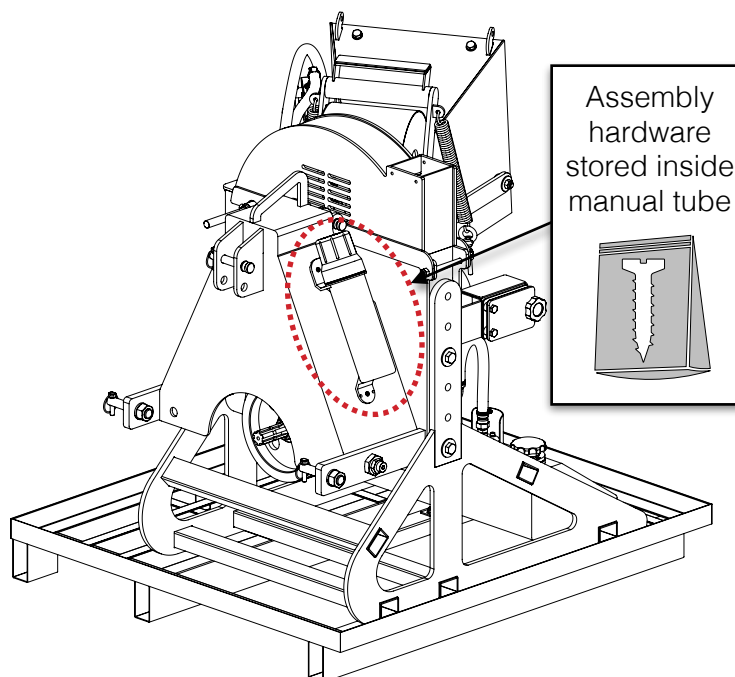


B. REMOVING THE SKID

With the wood chipper still resting on the skid, attach the tractor's 3-point hitch and raise it up off the skid. Slide the skid out from under the wood chipper and discard it. Carefully set the wood chipper down on the ground.

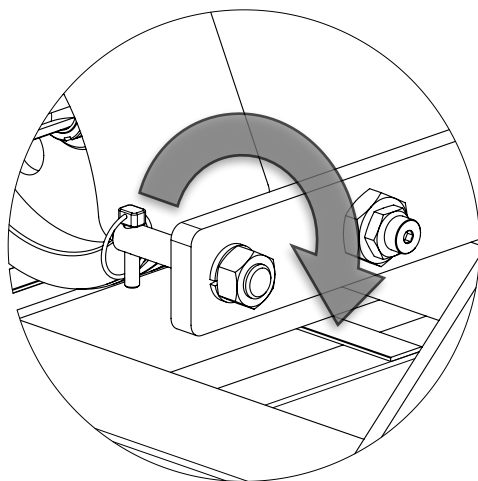

Before the 3-point hitch system can be connected to the wood chipper, the lower-left hitch pin must be reversed. It ships backwards due to shipping space constraints.



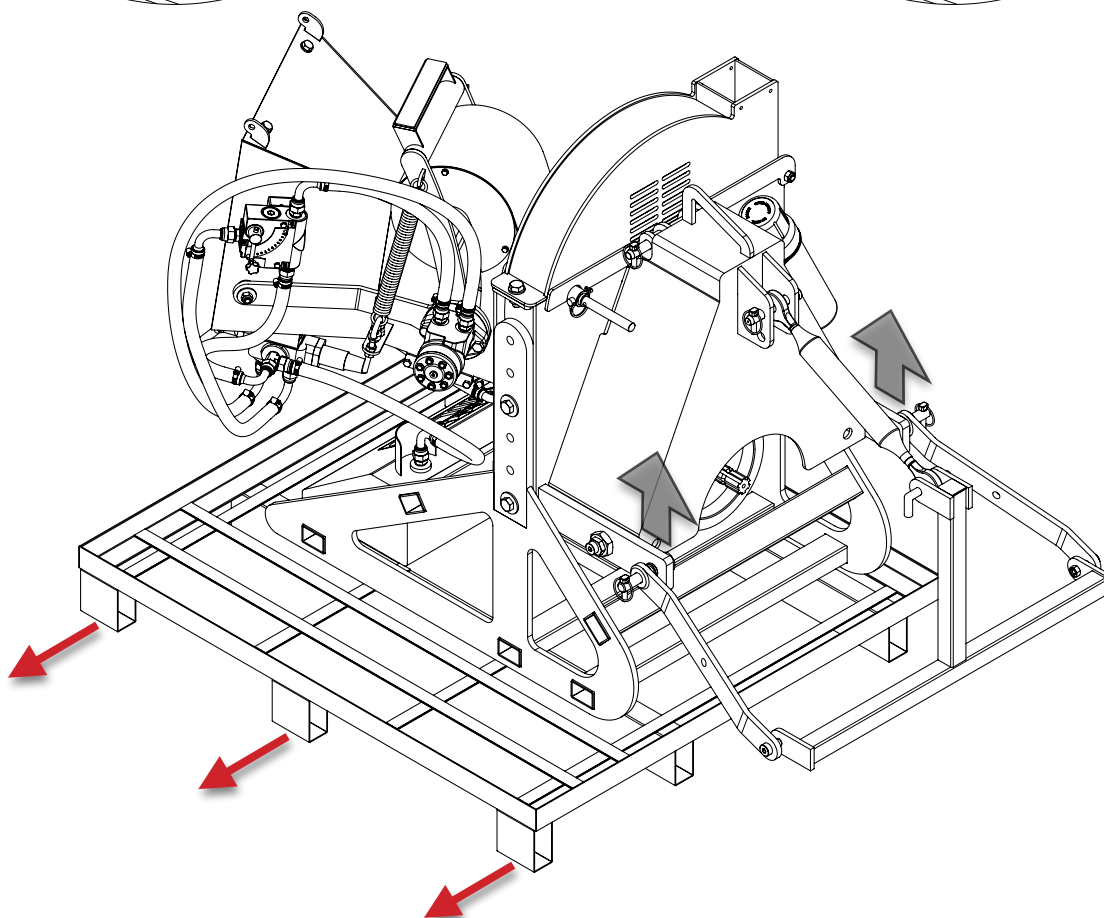
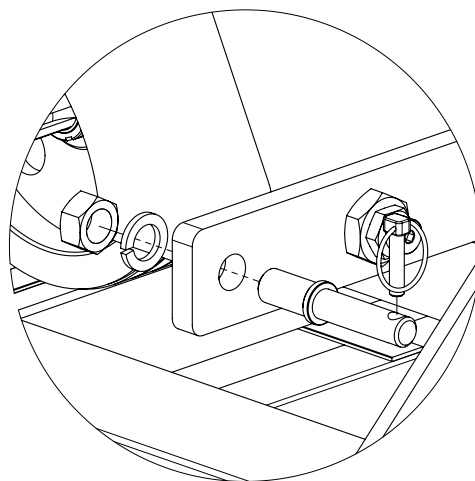





3. INFEED CHUTE

A. TOP PANEL






The wood chipper infeed chute consists of four (4) metal panels that are bolted together. The first step is bolting the top panel to the lower flywheel housing that forms the hinge. Using the hardware listed in the table below, assemble the hinge connection. Note that the infeed chute top panel and hinge bracket come pre-assembled from the factory.

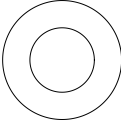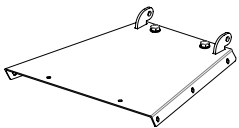2x	M10 X 15 X 20 mm Shoulder Bolt		6x	M12 Nylon Flat Washer	
2x	M10 Lock Nut		1x	Infeed Chute Top Panel	


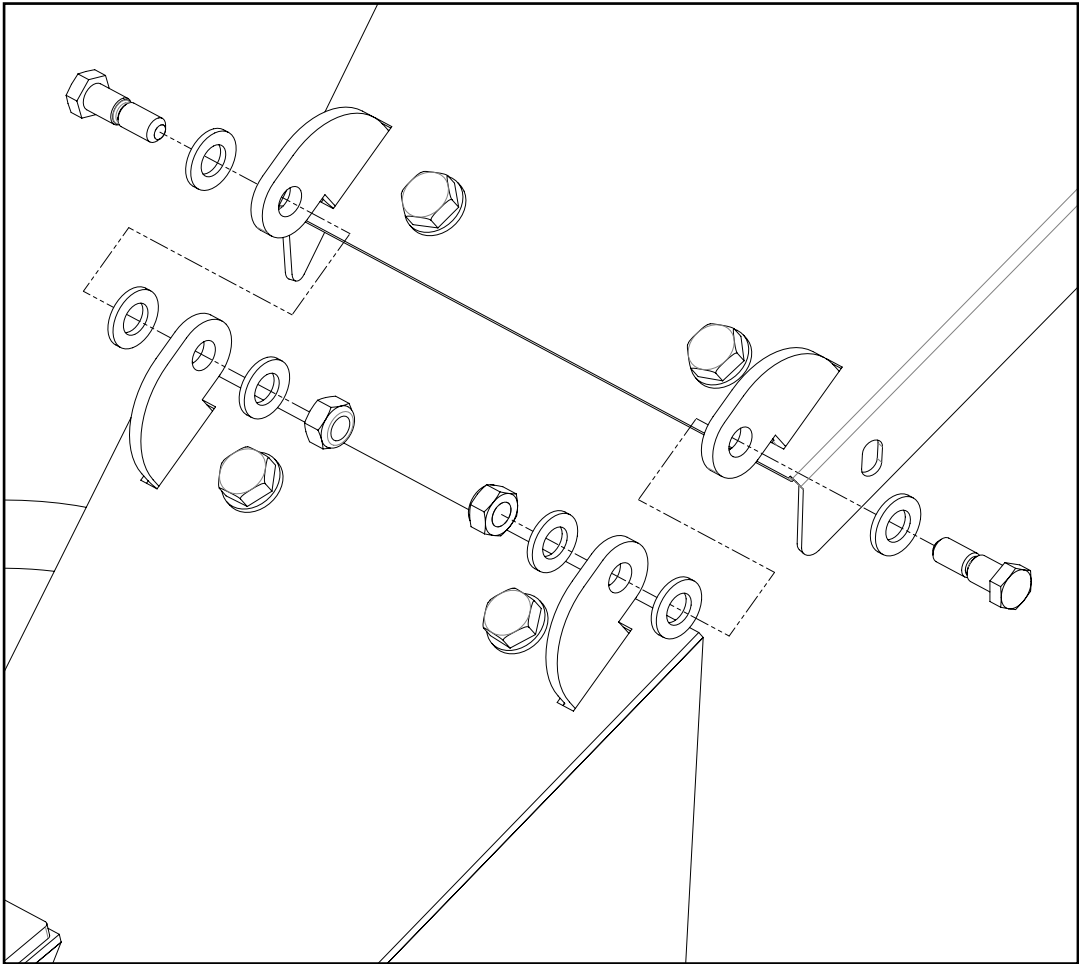


B. SIDE PANELS AND BOTTOM PANEL

With the top panel bolted to the hinge, assemble each side panel to the sides of the top panel using the M8 X 18 mm button head screws, M8 lock nuts, and M8 fender washers. Use a hex key for the screws and a socket/wrench for the lock nuts.

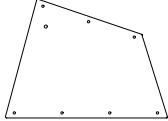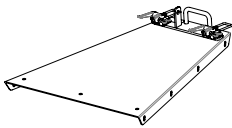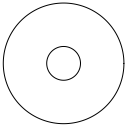6x	M8 X 18 mm Button Head Screw		2x	Infeed Chute Side Panel	
6x	M8 Lock Nut		1x	Infeed Chute Bottom Panel	
6x	M8 X 30 mm Fender Washer				



Install two (2) screws per side along the top edge leaving the last holes empty. Do not fully tighten the screws. Be sure to assemble the screws with the heads on the inside of the chute pointing outwards. Next, install the bottom panel using only the first two (2) bolts as shown below (right). This will allow it to swing up to join the side panels in the coming steps. Note that the infeed chute bottom panel and latches come pre-assembled from the factory.

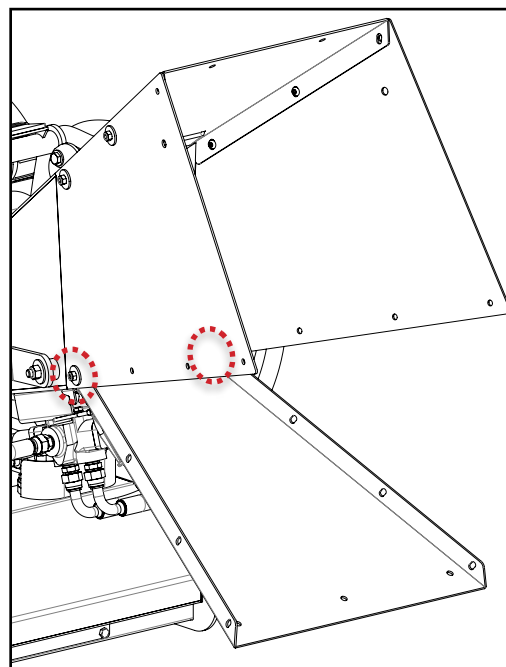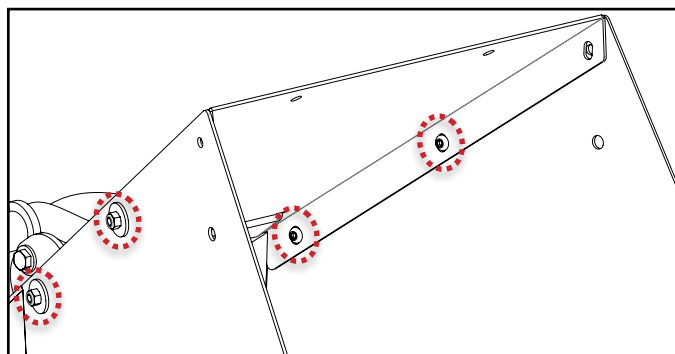

C. EDGE BAR





The round edge bar is designed to add additional strength to the infeed panels as well as act as a rounded edge, eliminating branches from getting caught on the edge of the infeed panels.



To install the edge bar, swing the bottom panel up as shown below and fit the tabs over the outside of the panels. There are two tabs on the side of the round edge bar which will be bolted to the side panels in a later step.

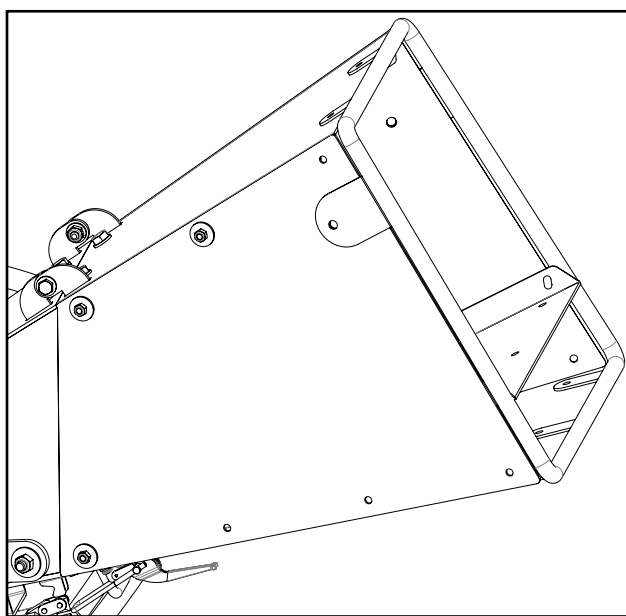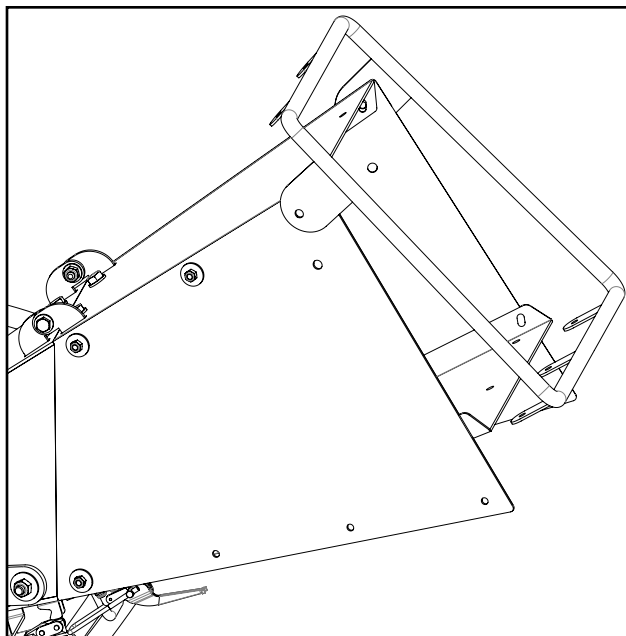







With the edge bar in place, use the hardware listed below to assemble the panels and the edge bar. Use a hex key for the button head screws and a socket/wrench for the lock nuts. Install the remaining thirteen (13) M8 X 18 mm button head screws, M8 lock nuts, and M8 X 30 mm fender washers as shown below to secure the panels and edge bar in place. Do not fully tighten the screws.

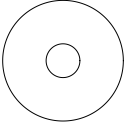13x	M8 X 18 mm Button Head Screw		13x	M8 X 30 mm Fender Washer	
13x	M8 Lock Nut		1x	Infeed Chute Round Edge Bar	

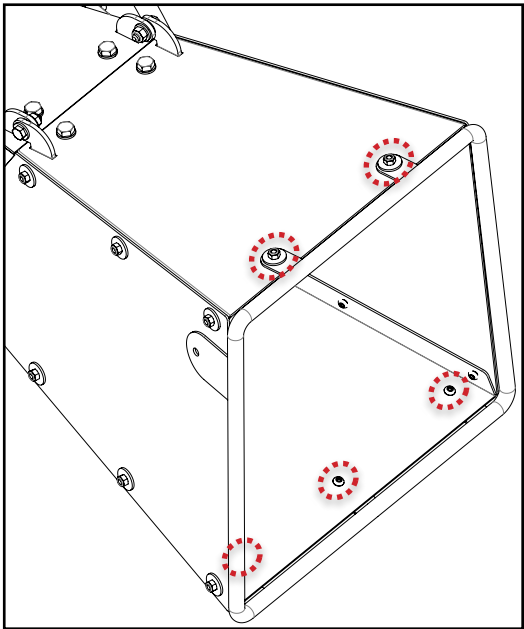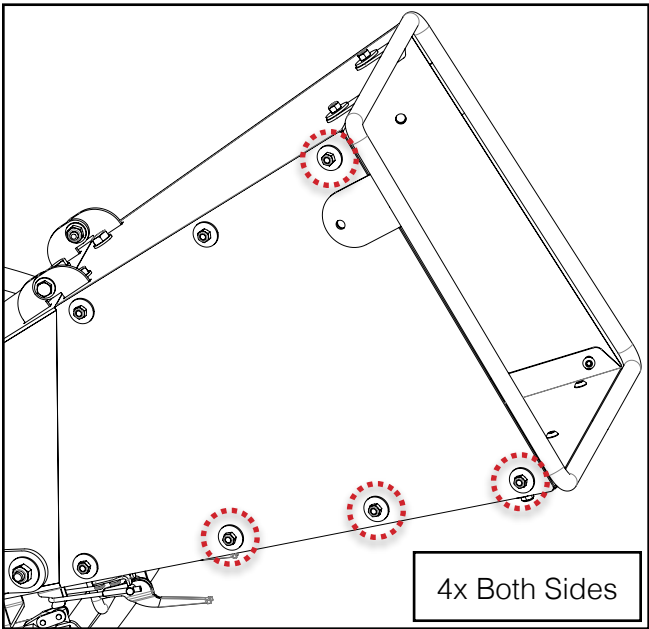


D. CONTROL ARM

The large red infeed control arm is attached using the hardware below.

2x	M10 X 35 mm Button Head Screw		2x	M10 X 26 mm Fender Washer	
2x	M10 Lock Nut		1x	Control Arm	

The screw passes through the green chute panel, the grey edge bar side tab, and finally through the red control arm tab as shown below.

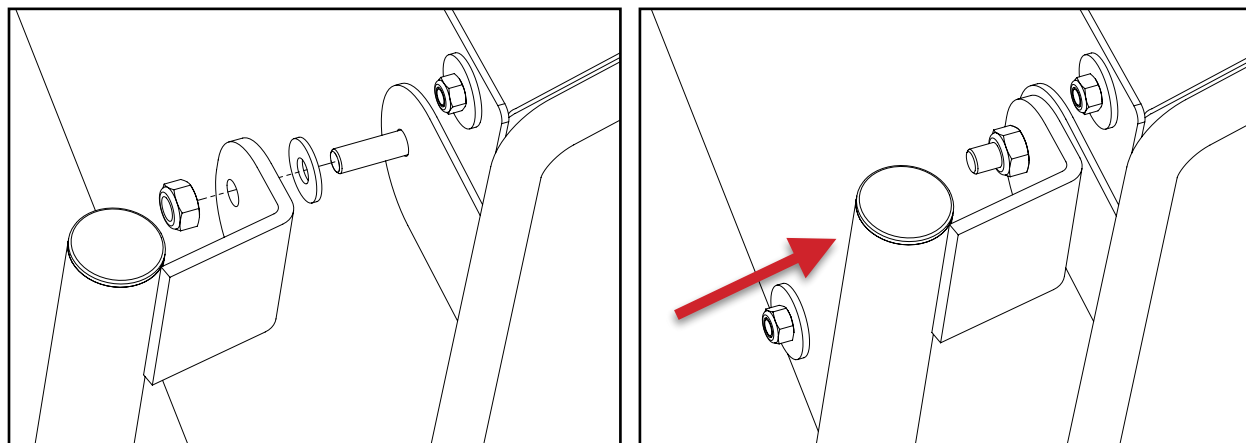
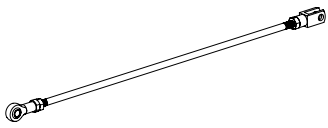





Note that the distance between the unassembled red infeed control arm mounting tabs can be significantly wider than the infeed chute. This is normal and the arm will flex when compressed. Assemble one side of the control arm first (but do not fully tighten it), then pull the other end in and secure that side.

With all of the infeed panel, edge bar, and control arm screws now loosely assembled, tighten all screws securely.



E. CONTROL ARM LINKAGE

With the control arm fastened to the infeed chute, the linkage assembly can now be connected between it and the hydraulic directional control valve.



1x	M10 X 35 mm Hex Bolt		1x	Control Arm Linkage Assembly	
1x	M10 Lock Nut		1x	10 mm Clevis Pin	
			1x	Hairpin Cotter Pin	

Fasten the rod end bearing to the red control arm with the M10 X 35 mm hex bolt and M10 lock nut as shown below.


.

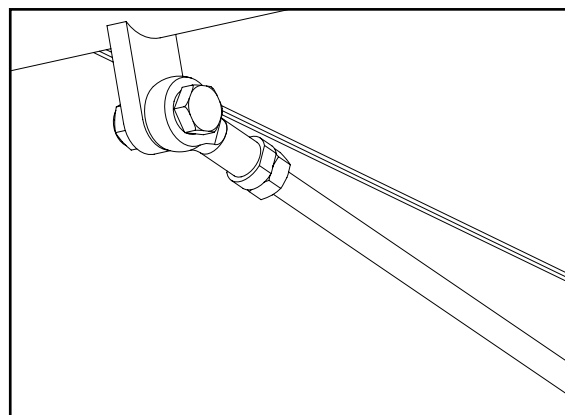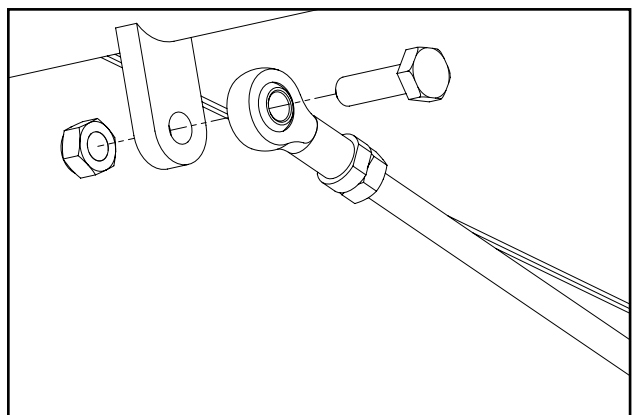

On the opposite end of the linkage, secure the linkage to the the hydraulic directional control valve actuator using the clevis pin and hairpin cotter pin.





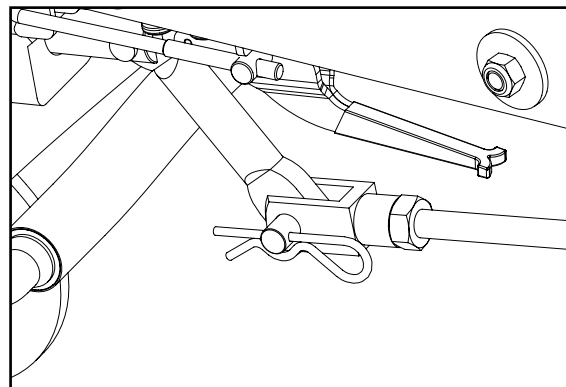
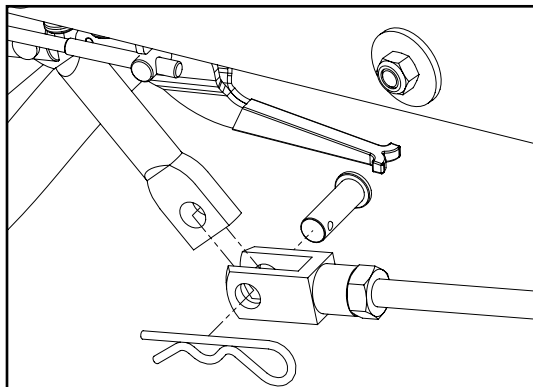




Once the linkage has been assembled, ensure both M10 jam nuts are tight.


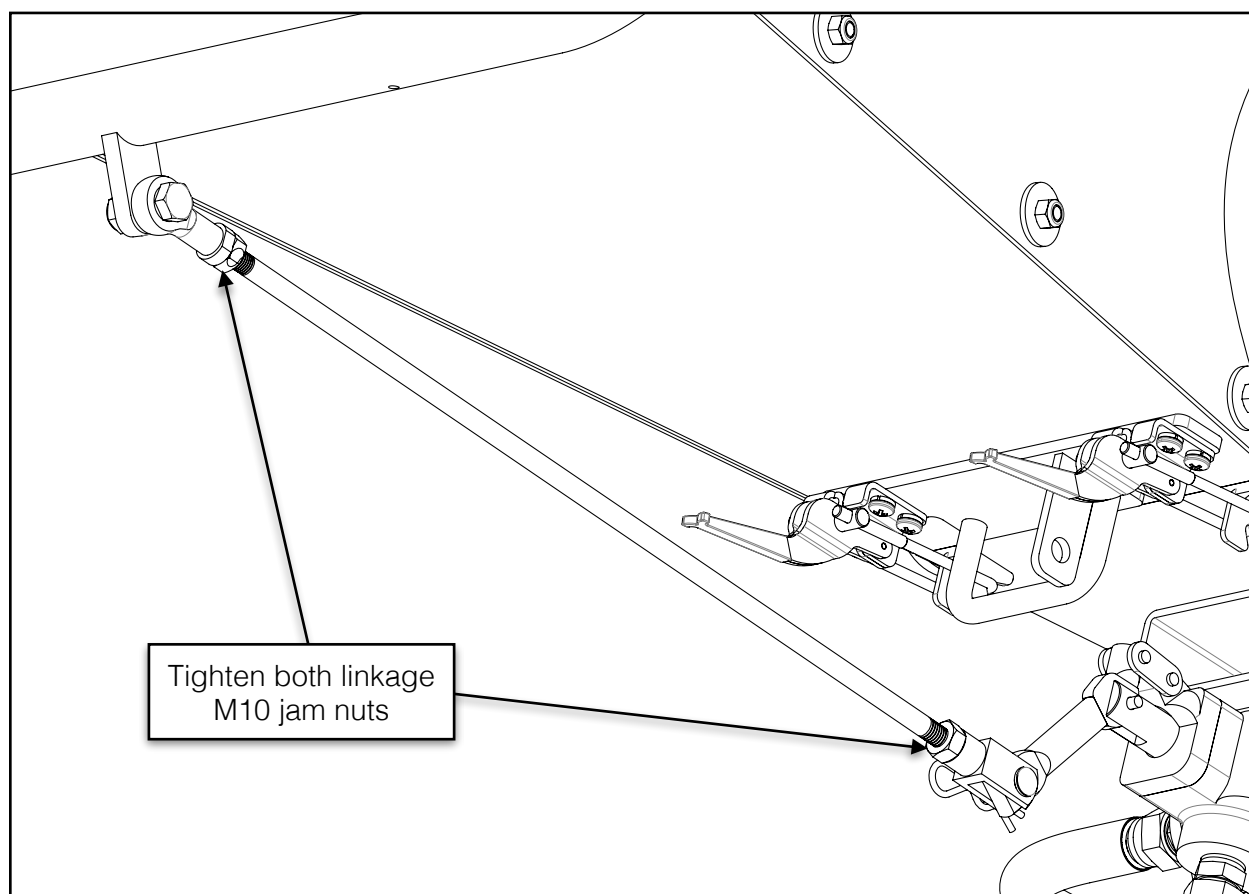


4. DISCHARGE CHUTE

The discharge chute assembly comes pre-assembled from the factory. With the hardware listed below, fasten the discharge chute assembly to the upper flywheel housing first and then assemble the handles to the discharge chute.

4x	M8 X 25 mm Hex Head Bolt		8x	M8 Flat Washer	
4x	M8 X 14 mm Hex Head Bolt		4x	M8 X 30 mm Fender Washer	
4x	M8 Lock Nut		1x	Discharge Chute Assembly	
4x	M8 Lock Washer		2x	Discharge Chute Handle with Grip	

Connect the chute using four (4) M8 X 14 mm hex bolts, M8 lock washers, and M8 X 30 mm fender washers as shown below. Then assemble both handles to the chute using four (4) M8 X 25 mm hex bolts, eight (8) M8 flat washers, and four (4) M8 lock nuts.

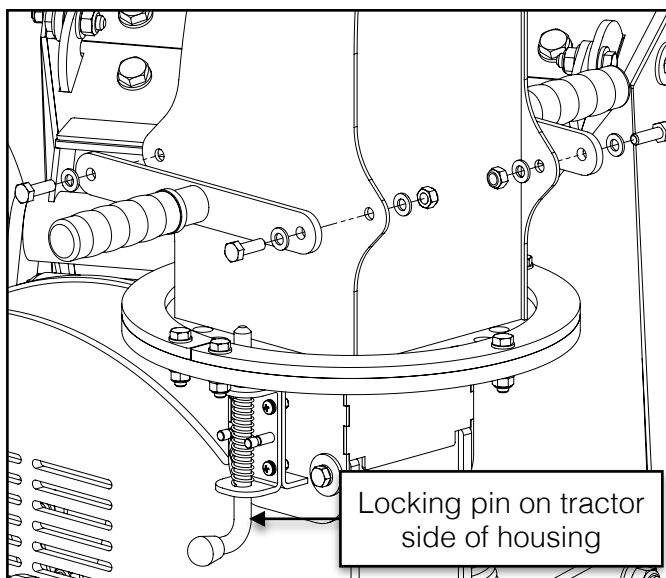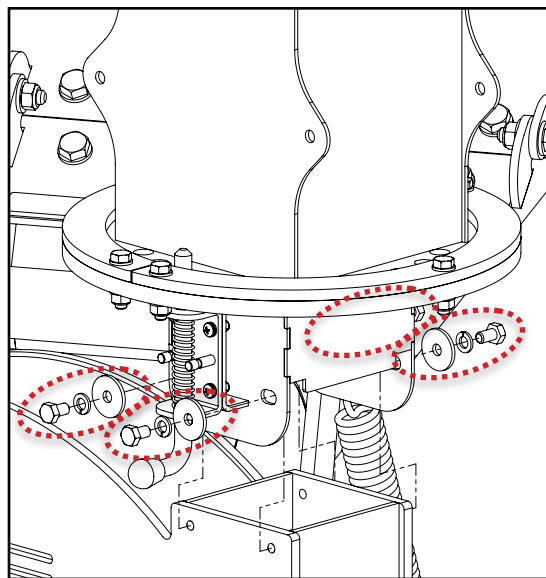


TRIMMING THE PTO SHAFT

The wood chipper is shipped with a PTO shaft that can be fitted to most Category 1 tractors. The PTO shaft may need to be trimmed depending on your tractor and configuration. Follow the steps below to ensure the PTO shaft is correctly fitted to your tractor.


****Note: the shear bolt end of the PTO shaft mounts to the wood chipper.****

1. Attach the wood chipper to the tractor's 3-point hitch system. Do not install the PTO shaft.
2. With the wood chipper resting on flat ground, note the angle (θ) between the two shafts as shown in the graphic below. If this angle exceeds 25° , stop, and proceed to the sub-section, ***Adjusting the Base Height*** (Page 27), to raise the height of the chipper. Continue on to *Step 3* on the next page after raising the base height.


If angle θ is 25° or less, proceed to *Step 3* on the next page and ignore the ***Adjusting the Base Height*** sub-section.

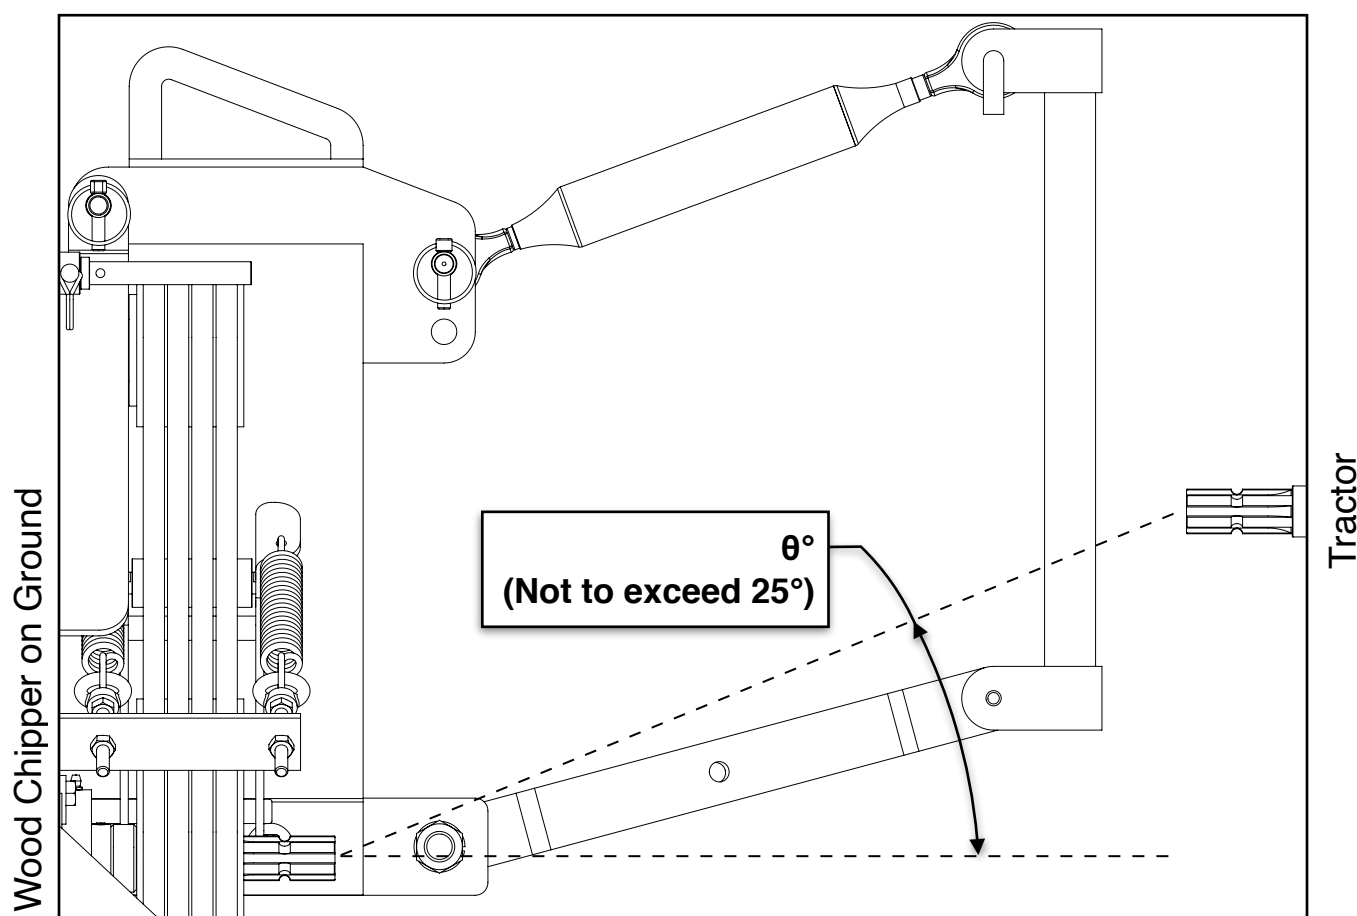


3. Use the 3-point hitch system to raise the wood chipper (shown below) so that the tractor output shaft and the wood chipper driveshaft are in-line (bottom image).

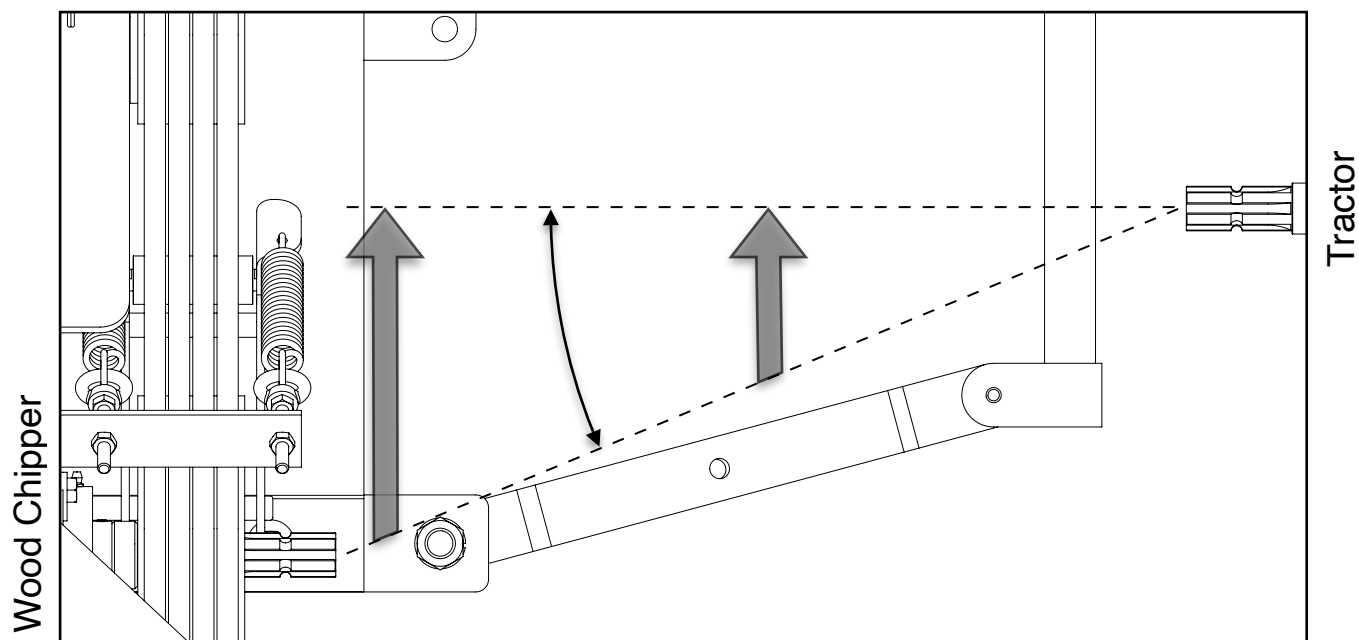

4. Measure the straight-line distance between the locking grooves on the splined shafts of the tractor and wood chipper (**Dim A** below).

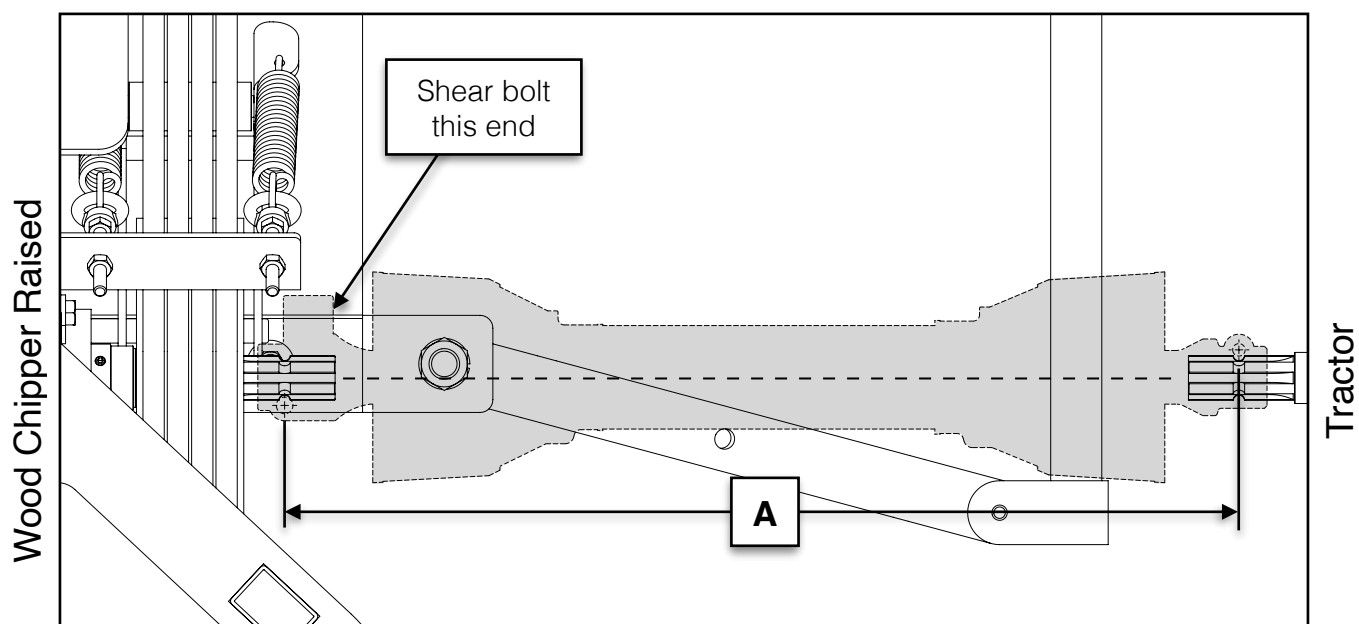


5. Verify the distance between the locking pins on the PTO shaft while in the compressed state (**Dim B**) as shown in the image below. It should measure 29-7/16 in [747 mm].

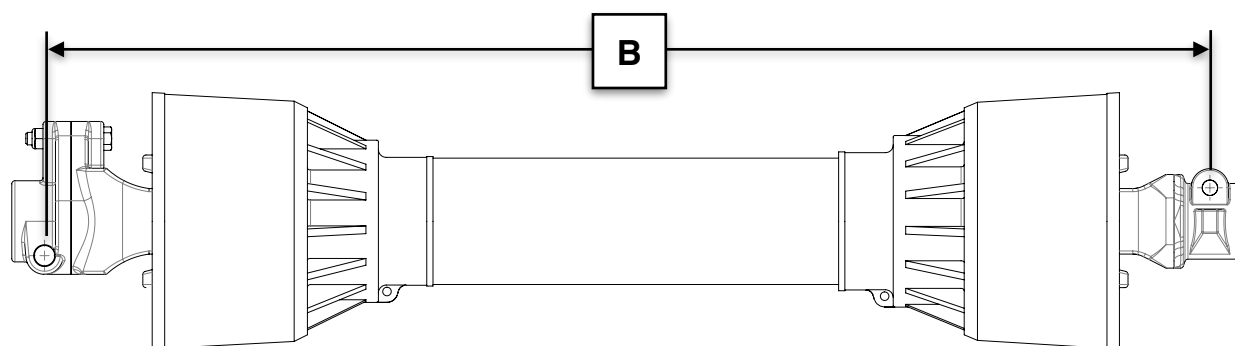

6. If **Dim A** is at least 1 in [25 mm] longer than **Dim B**, the PTO shaft does not require trimming. It is recommended the shaft not be used if there is less than 6 in [150 mm] of overlap between the two halves of the PTO shaft when the equipment is in the operating position.
7. If **Dim B** is longer than **Dim A**, the PTO shaft will require trimming. Use this equation to calculate the correct amount to trim:

$$(B - A) + 1 \text{ inch} = C \text{ (Amount to Trim)}$$

8. Once **C** has been calculated, trim that amount from **BOTH** halves of the PTO shaft safety cover *first*, then trim the same amount from both shafts. This will ensure the safety cover on each end remains a few inches back from the ends of the shafts, otherwise PTO shaft reassembly could be difficult.
9. After trimming both halves of the PTO shaft, use a file to remove any burrs or sharp edges and slide the halves back together, ensuring they telescope in-and-out freely. The PTO shaft is now ready to connect the wood chipper to the tractor for operation.

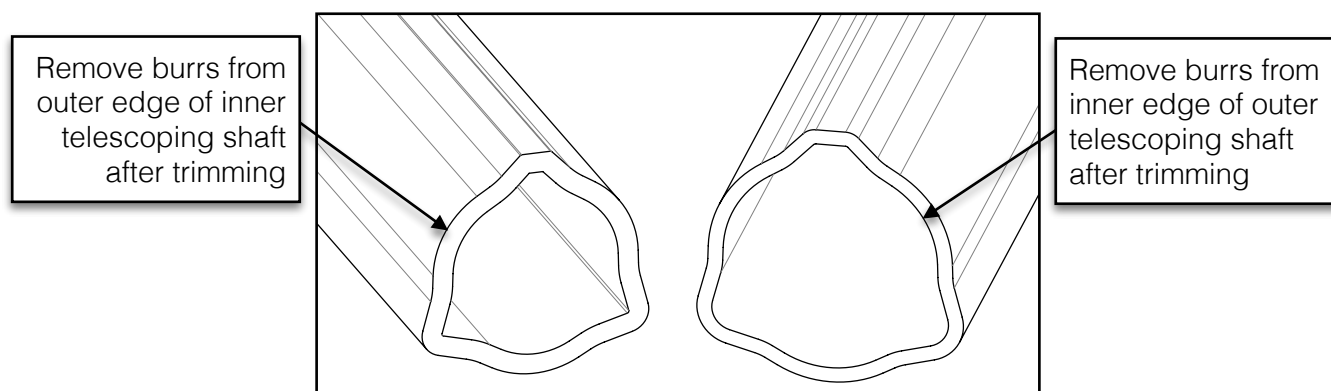


ADJUSTING THE BASE HEIGHT (IF REQUIRED)


If the wood chipper will be driven by a large tractor, the base can be adjusted to raise the wood chipper an additional 3-6 in [76-152 mm] to allow for better PTO shaft alignment. When the angle (θ) between the tractor output shaft and wood chipper driveshaft exceeds 25° , the base height needs to be increased or the PTO shaft could be damaged.

Follow the instructions on the next page to adjust the base height.

****If angle θ is 25° or less, ignore the *Adjusting the Base Height* section.****

****If angle θ exceeds 25° , the base height must be increased.****

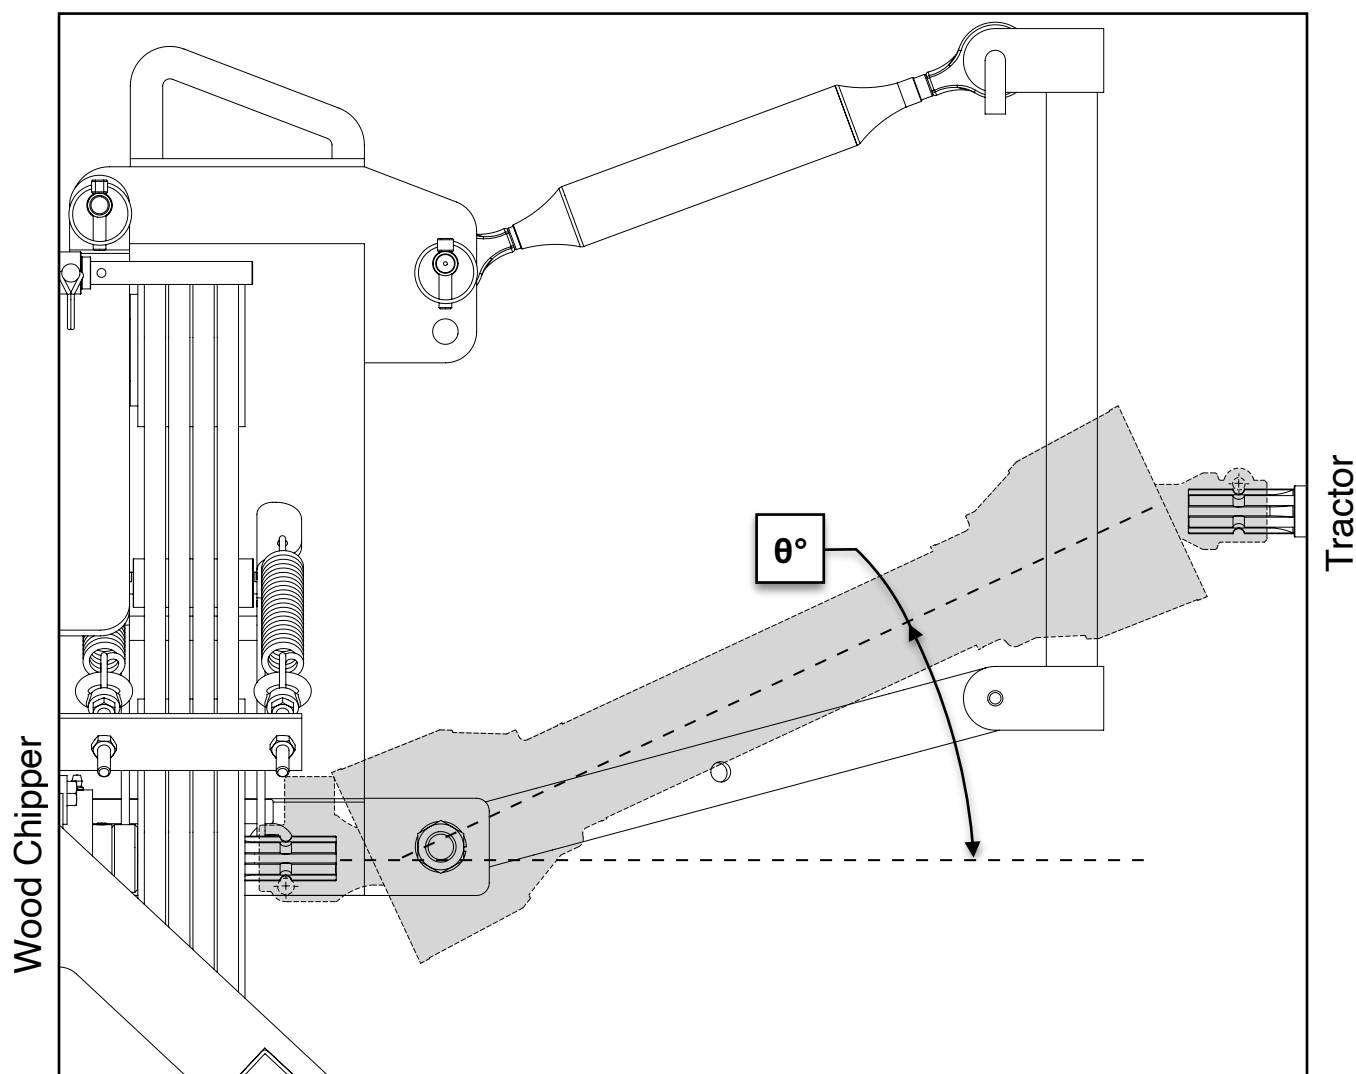

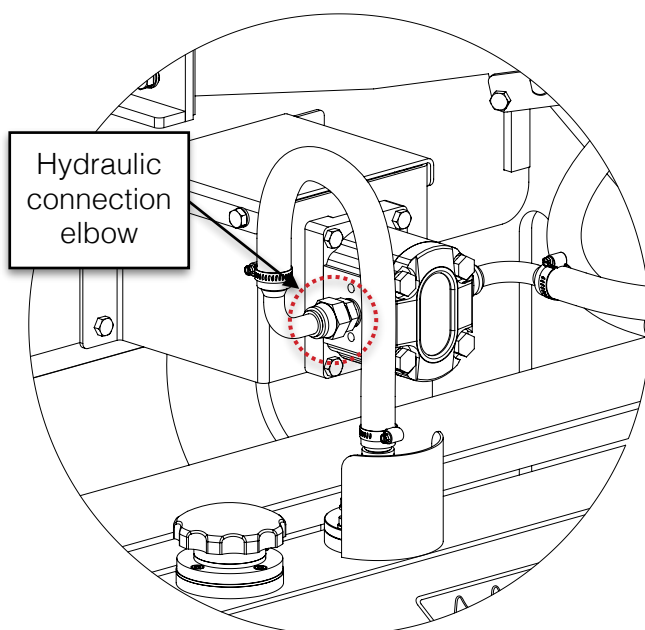


With the 3-point hitch system connected to the wood chipper, leave the chipper resting on the ground.


Loosen the hydraulic connection elbow at the pump inlet first. This will allow the fitting to rotate downward as the housing is raised.

There are six (6) mounting holes on each side of the base. The spacing between each hole is 3 in [76 mm], with a maximum adjustment of 6 in [152 mm], as there must always be two (2) empty holes between both bolts. Depending on how steep the measured angle (θ) is between the shafts, the base may only require 3 in [76 mm] of adjustment which would move the chipper housing up one (1) hole.

Remove the four (4) M16 X 60 mm bolts and M16 X 45 mm fender washers from the base. Note that there are M16 lock nuts on the bottom bolts but not the top bolts—those bolts are secured into threaded holes in the housing.


Using the 3-point hitch system, carefully raise the housing from the base. The spacing between each hole in the base is 3 in (76 mm), so either raise the housing up one hole (3 in) or two holes (6 in) depending on the steepness of the angle (θ) measured between the shafts.

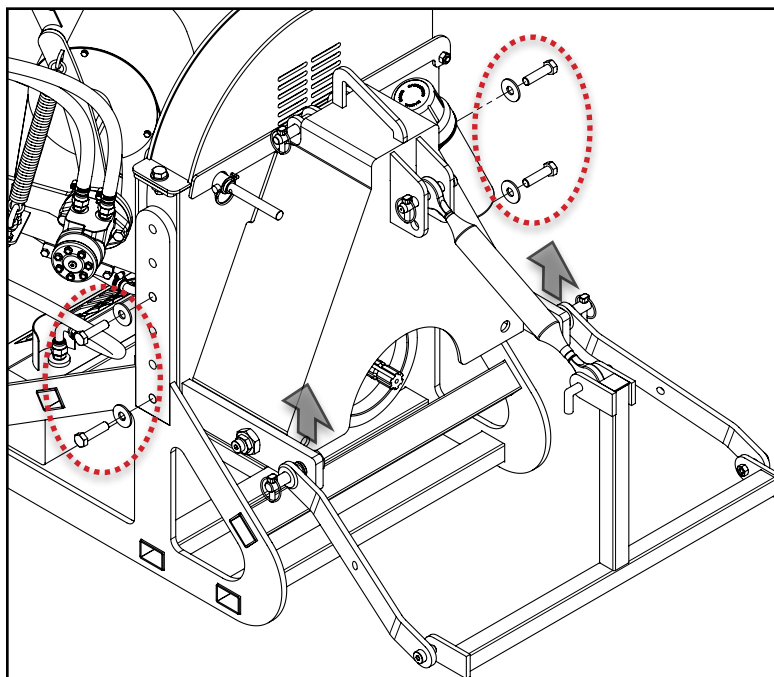

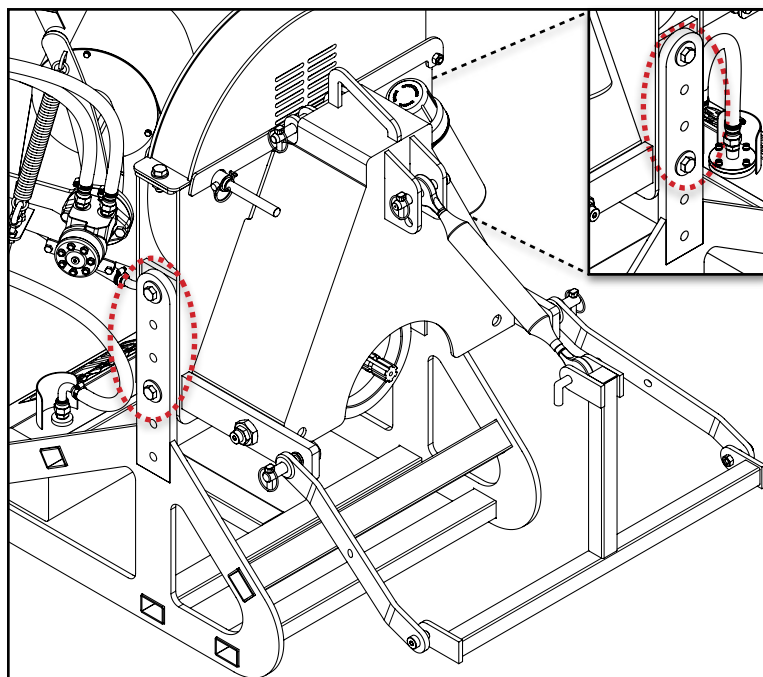


Reattach the base to the housing using the four (4) M16 X 60 mm hex bolts and M16 X 45 mm fender washers. Secure the bottom two (2) bolts with the M16 lock nuts.

Remember to space the bolts so there are two (2) empty holes between them.

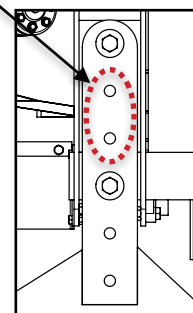

As the housing was raised, the loosened hydraulic connection elbow should have rotated downward from its original as-shipped position. If not, wiggle the hose and it should rotate down. Retighten the connection after the base height has been set.

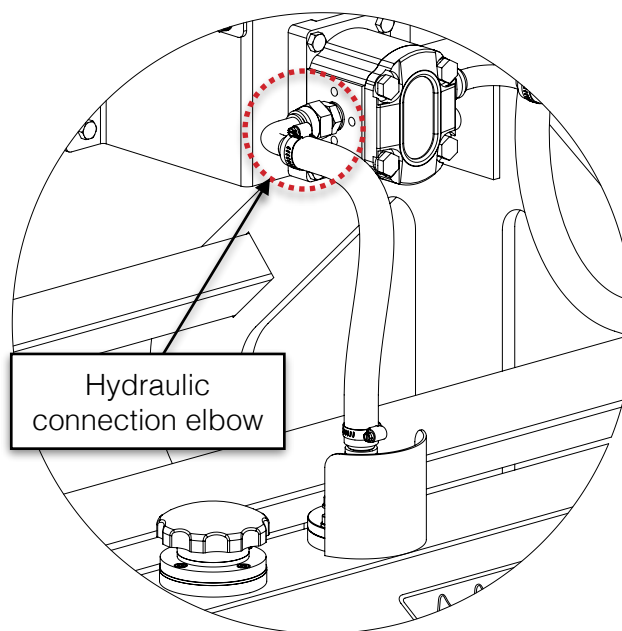

Continue to *Step 3* (Page 25) in the previous section, ***Trimming to PTO Shaft***, once the base height has been raised.



OPERATION

1. PRE-START UP CHECKLIST

- i. Fill the hydraulic tank with hydraulic oil per the table below:

Model	Capacity		Hydraulic Oil
	Gallons (gal)	Litres (L)	
WC46	4.5	17	ISO 32, ISO 46, AW 32, AW 46
WC68	5	18.9	
➡ WC88	5	18.9	

- ii. Attach the wood chipper to your tractor and take the appropriate measurements to trim the PTO shaft. Refer to the "**TRIMMING THE PTO SHAFT**" section of the operator's manual for detailed instructions.

****Note: Failure to do so may result in severe damage to the implement and is not covered under warranty.****

- iii. Ensure the bed plate gap is set to within 1/16—1/8 in [1.5—3 mm] between it and the blades. Refer to "**SETTING THE BED PLATE GAP**" in the operator's manual for detailed instructions.
- iv. The wood chipper has several bearings fitted with Zerk fittings for greasing. The PTO shaft is fitted with two (2) Zerk fittings, one on each yoke. The PTO shaft and all bearings come pre-greased and do not require greasing on initial start-up. Refer to the "**GREASING BEARINGS AND PTO SHAFT**" section of the operator's manual for detailed maintenance instructions.



2. START UP

The following steps in the sub-section below (a. through i.) are a summarization of the steps necessary to safely and properly operate the wood chipper. Please follow the references to other sections that provide further detail into the step being performed.

- a. Place the tractor transmission in neutral, set the parking brake, then turn the tractor engine off.
- b. Connect the 3-point hitch linkages to the wood chipper and secure them with linch pins.
- c. Adjust the top link of the 3-point hitch so that the wood chipper sits level.
- d. Connect the PTO shaft to the tractor with the shear bolt end of the PTO on the wood chipper. Make sure the PTO safety chains are attached to both the tractor and the wood chipper to keep the protective PTO safety cover from rotating.
- e. Rotate the discharge chute towards a safe direction and lock it in place with the spring-loaded latch and indexing holes. Adjust the chip deflector to the desired position based on how far they should be thrown.
- f. Push the red control arm all the way in until it stops, then pull it out one click to ensure the infeed roller is in the neutral position.
- g. Start the tractor engine and hold the engine RPM's at a strong idle. Engage the PTO slowly. If the tractor is running at a high speed when the PTO is engaged, you could damage the drive belts or break the shear bolt on the PTO shaft. After the rotor is spinning freely increase the tractor RPM's until the PTO speed is 540 RPM. Most tractor tachometers commonly indicate this with a line and/or text.
- h. Pull the red control arm all the way out until it stops (forward position). This will start the infeed roller rotating. Set the infeed roller control to the desired speed.
- i. With the wood chipper now running and the infeed roller rotating, it is safe to begin chipping. Start by feeding smaller diameter branches until better acquainted with the machine and its operation. Once comfortable, begin feeding in larger pieces. Adjust the infeed roller control as necessary to regulate the infeed rate of the branches.




WARNING!


To avoid serious injury or death, do not chip brush containing embedded foreign objects such as nails, wire, metal fragments, etc. The operator and any assistants must always stay clear of the infeed chute of the wood chipper whenever it is running.

3. INFEEED ROLLER CONTROL

The wood chipper infeed roller speed control valve is located to the right of the infeed chute. Rotating the arm as shown in the pictures below will increase or decrease the speed of the infeed roller. The number “0” (left image) represents no infeed roller rotation while “10” (right image) represents full speed. Effective working range is from 0-4. It is normally not necessary to move the arm past “4.”

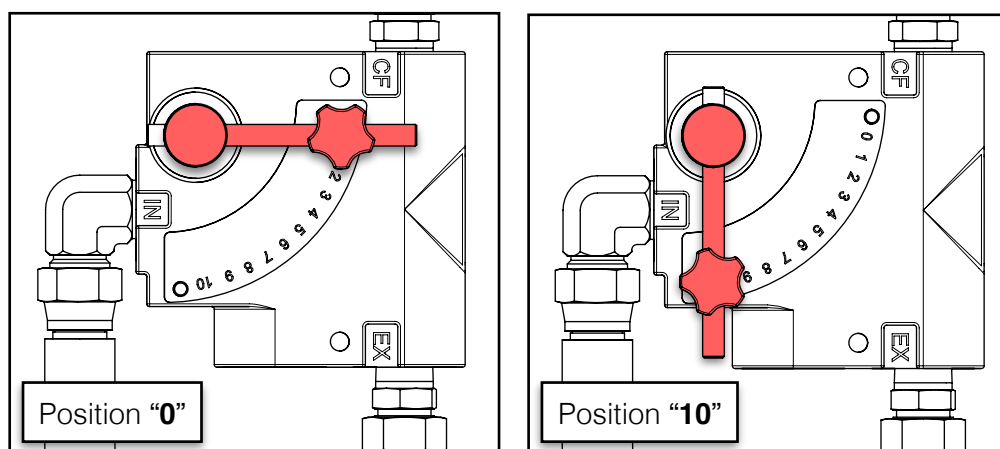

The infeed roller can be set to three (3) different rotation settings—*forward*, *neutral* and *reverse*—by pushing or pulling the red control arm. The *forward* position pulls branches into the wood chipper; *neutral* stops the roller from rotating; and *reverse* pushes the branches back out the wood chipper towards the operator. The diagram below illustrates the 3 positions:

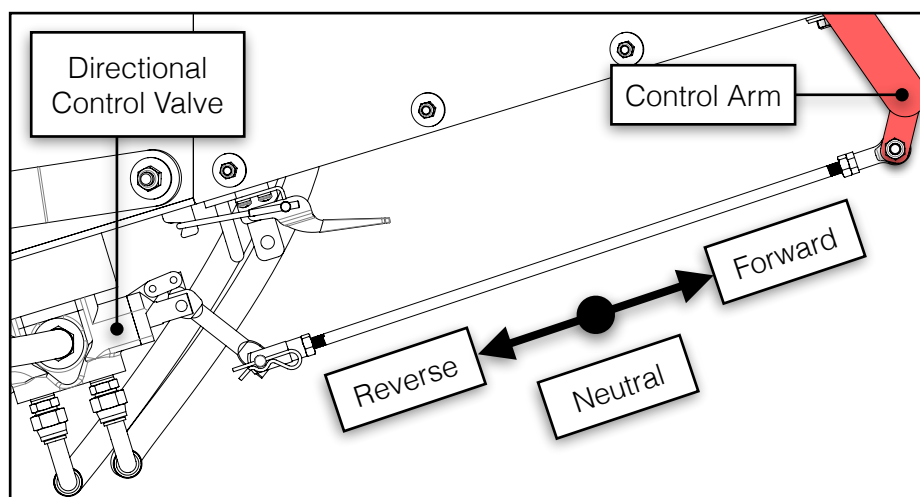


To change the speed of the infeed roller, place the red control arm in the *neutral* position. This stops the infeed roller from rotating. The speed control valve can now be moved to the desired position/speed. Reengage the infeed roller via the control arm.


See maintenance section, **ADJUSTING THE RED CONTROL ARM**, if the control arm feels too loose or stiff, or if it falls into neutral or reverse unexpectedly.

4. DISCHARGE CHUTE

To rotate the discharge chute, push down all the way on the spring-loaded locking pin and twist it 90° to temporarily lock it in the open position. The discharge chute is now free to rotate a full 360°. Using the handles, rotate it to the desired position and then twist the locking pin back 90° so that it extends into the closest locking hole to secure the chute in position.

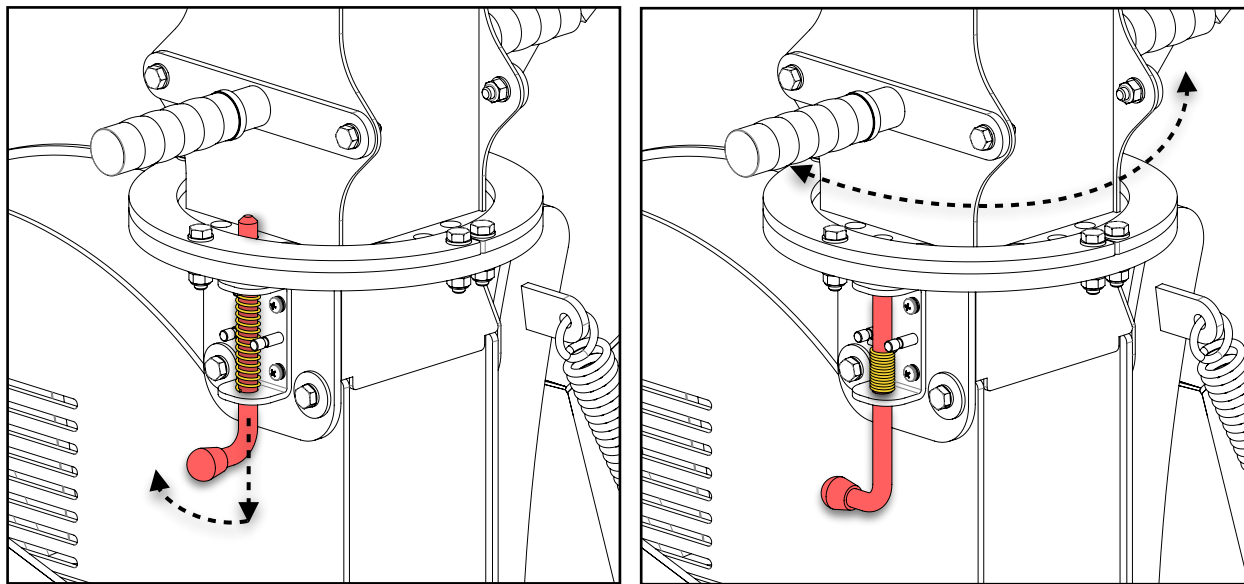

The chip deflector easily adjusts to regulate the distance the chips are thrown. Rotate the handle counterclockwise to loosen the deflector, adjust the deflector to the desired angle, then re-tighten the handle by rotating it clockwise to secure the deflector.

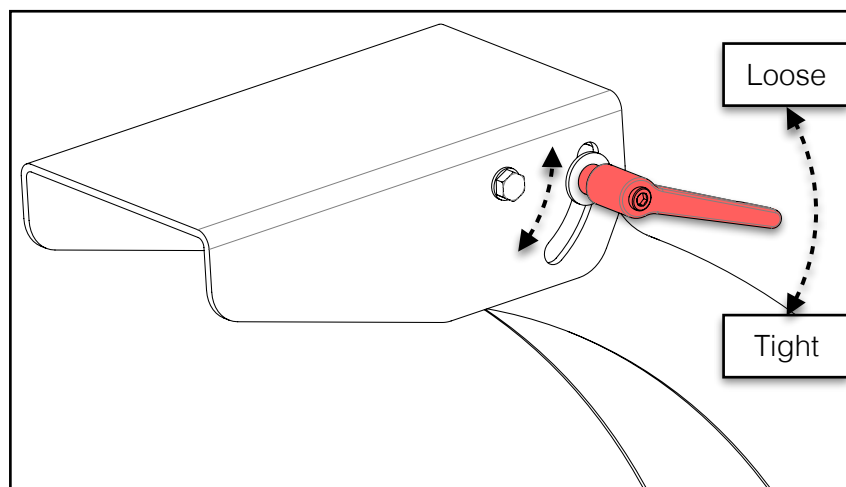



5. CHIPPING

Keep your face and body away from the feed opening. Do not over reach. Keep proper balance and footing at all times. The wood chipper is designed to chip a variety of materials into a more readily decomposing or handled condition. The following guidelines can be used to help you get started. Please read and follow all safety instructions in this manual. Failure to operate the wood chipper in accordance with the safety instructions **MAY RESULT IN PERSONAL INJURY!**

- Ensure the wood chipper is at full operating speed before starting to chip material.
- Select limbs up to 8" (203 mm) in diameter. Trim side branches that cannot be bent enough to feed into the wood chipper infeed chute. Hold small diameter branches in a bundle and feed simultaneously.
- Feed brush from the side of the infeed chute rather than from the front. Step aside to avoid being hit by brush moving into the wood chipper.
- Never lean into the infeed chute or extend any parts of your body inside the infeed chute to push objects further into the wood chipper. Use another stick or branch.
- Do not use hand tools to push brush into the wood chipper. They can go through the wood chipper and cause injury or damage to the wood chipper.
- Place branches, butt end first, into the wood chipper infeed chute until it contacts the infeed roller. Once the infeed roller makes contact with the branches, it will pull the material inwards.
- **NOTE:** The wood chipper blades dull with use and require periodic sharpening and sometimes replacing. Refer to the section under service and maintenance, "Sharpening Wood Chipper Blades," for further instructions.

6. STOPPING

Do not leave the wood chipper unattended or attempt any inspection/service unless the PTO is disengaged and the tractor engine is turned off. Allow time for the wood chipper to come to a complete stop. To stop the wood chipper, follow the steps below:



1. Move the tractor throttle to the SLOW/IDLE position.
2. Disengage the PTO lever and turn off the tractor engine.
3. Allow time for the wood chipper to come to a complete stop.

NOTE: The flywheel continues to spin for some time after the engine or tractor has been turned off. The flywheel has stopped spinning when noise and/or machine vibration are no longer detectable. The PTO shaft will also no longer be spinning.

6. CHAINSAW HOLDER

On the rear side of the flywheel housing there is a holder to conveniently secure a chainsaw while transporting the wood chipper or to store it out of the way while chipping brush.

Loosen the knob, slide the chainsaw down between the rubber pads, and retighten the knob to secure it in place.

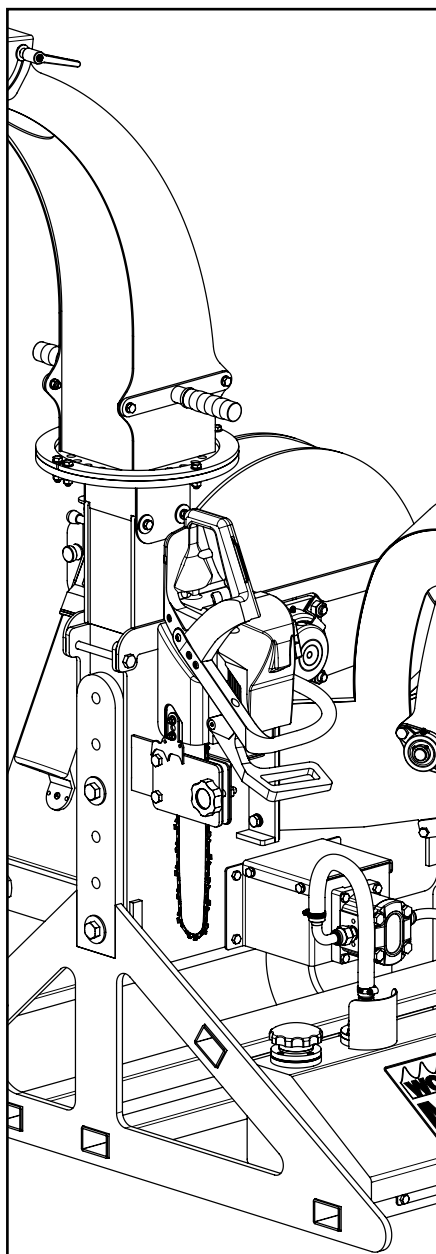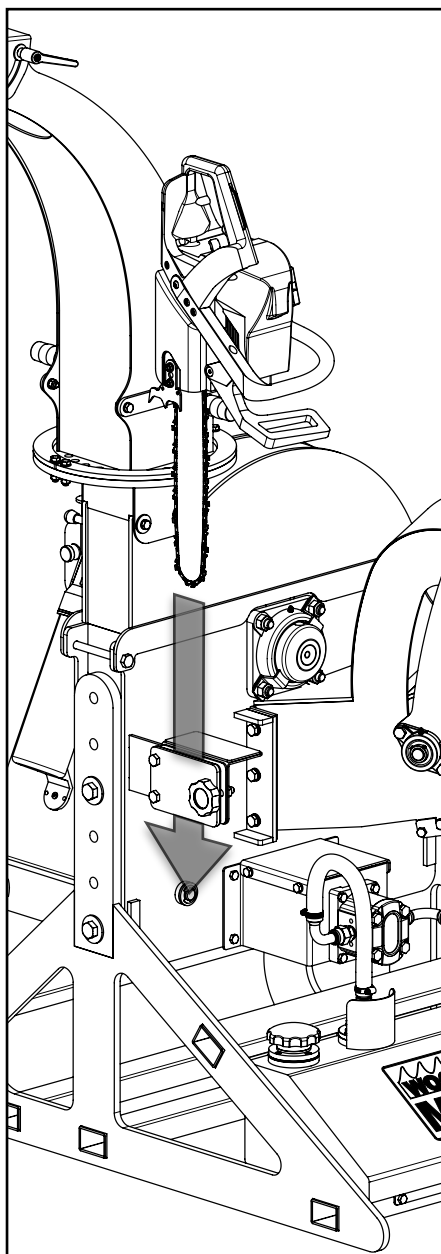


MAINTENANCE



REPLACING BLADES

Follow these steps when replacing blades. The WC88 wood chipper uses four (4) reversible hardened steel blades. Each blade is 4.45 X 2.72 X 5/16" (113 X 69 X 8 mm) in size.


1. If installed, disconnect the PTO shaft from the tractor for safety.
2. Open the upper flywheel housing using a 24 mm socket/wrench by removing the M16 X 40 mm bolt and flat washer securing the upper and lower housings together.

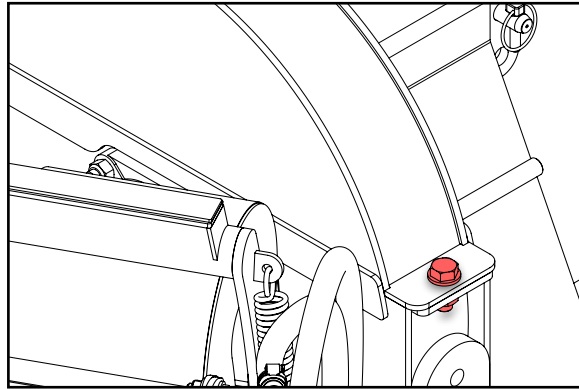

3. With the flywheel exposed, manually rotate it so that one of the four (4) locking holes in the flywheel (near the front of the blade) approximately lines up with the flywheel lock pin at the rear of the housing. Remove the small locking pin from the flywheel lock pin and flip the flywheel lock pin around 180°, passing it through the housing and into the locking hole in the flywheel. Reinstall the smaller locking pin to the flywheel lock pin.

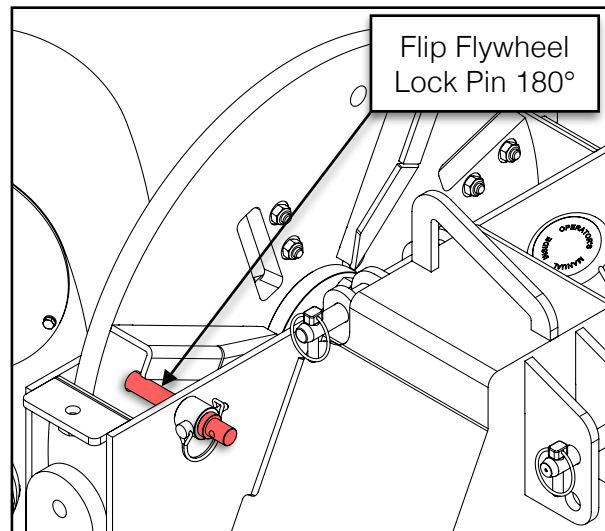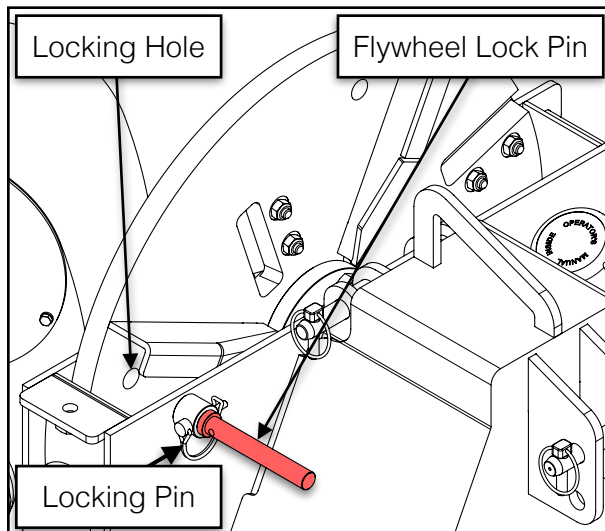

4. Remove the two (2) M10 X 40 mm flat head bolts and M10 lock nuts that fasten the blade to the flywheel using a 6 mm hex key on the bolts and a 17 mm socket/wrench on the lock nuts. Take care not to drop the hardware into the lower flywheel housing. However, should this occur, a telescoping pen magnet can be used to retrieve them.

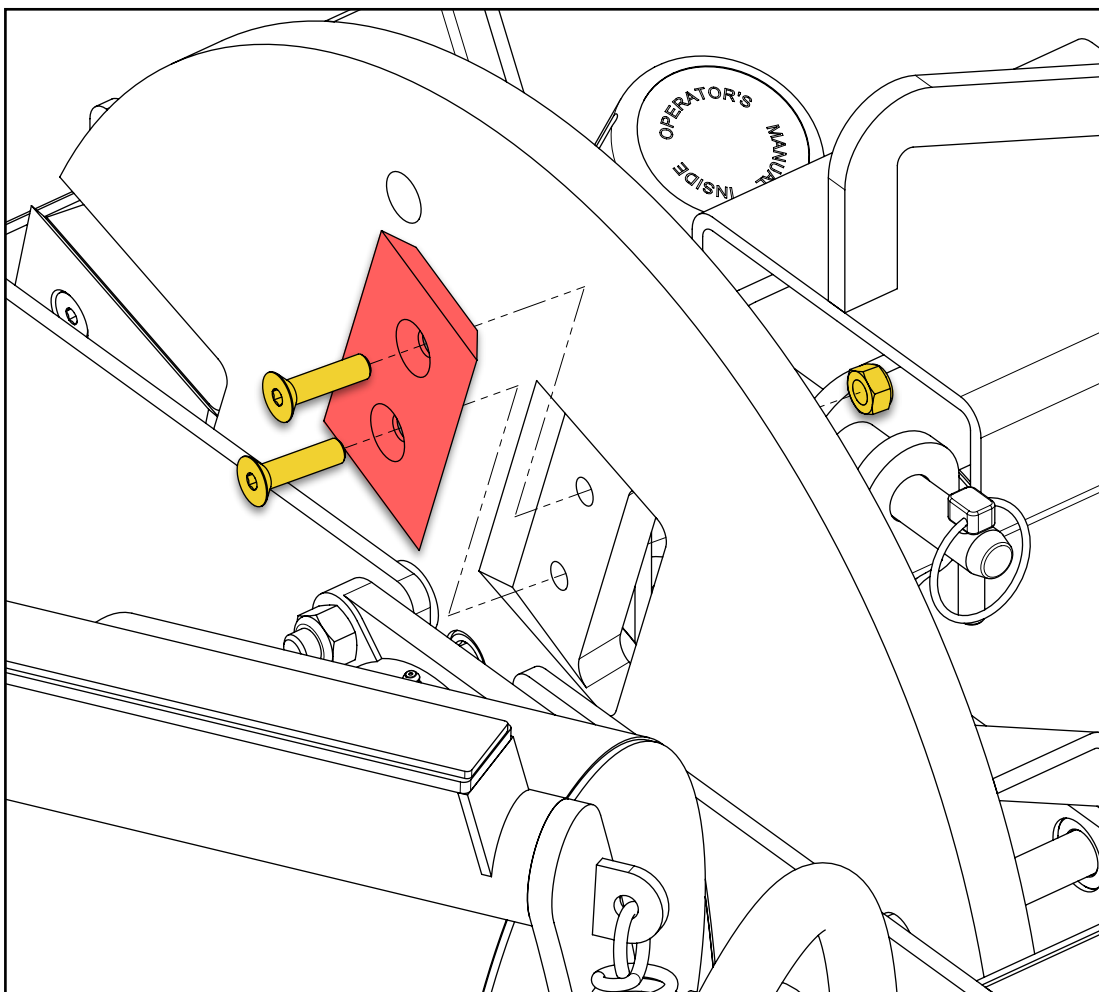


5. Repeat Steps 3 & 4 above to remove the remaining three blades. If this is the first time the blades have been removed following either the original wood chipper purchase or a recent blade sharpening, the blades can be reversed to utilize the other cutting edge. Or, the entire blade can be removed and sharpened or it can be replaced with a new blade. Torque the M10 X 40 mm flat head bolts to 40-45 ft•lb (54-60 N•m) when installing blades. Always replace the M10 lock nuts with a new set when changing or reversing blades. Refer to section, **Blade Sharpening** for blade sharpening instructions
6. Once the blades have been reversed or new blades installed, proceed to section, **Setting the Bed Plate Gap**, to properly set the spacing between the blades and bed plate.



BLADE SHARPENING

The wood chipper blades will dull, making chipping difficult and cause your tractor to labour. It is recommended to sharpen the blades every 25-50 hours of operation. The WC88 wood chipper uses four (4) hardened steel blades. The blades are reversible and can be sharpened on both sides. Follow the below steps to sharpen the blades.

1. Follow the steps from the previous section, **Replacing Blades**, to safely remove the blades from the flywheel.
2. Hand-grind the angled edges of the blade at 33° (see diagram below) using a whetstone or have them sharpened by a professional. A pedestal style bench grinder will likely yield poor results if not used properly. If sharpened quickly or aggressively on a bench grinder, the blade edge can get too hot and change colour, thus removing the heat treating-properties from the steel. Use short grinding times and cool frequently with water. Remove an equal and consistent amount of material from each blade to maintain proper balance when reassembled to the flywheel.




Blade Profile


3. Reinstall the sharpened blades on the flywheel and torque the M10 X 35 mm flat head bolts to 40-45 ft•lb (54-60 N•m). Always replace the lock nuts with new hardware when changing or reversing the blades.
4. Once the blades have been sharpened, proceed to the next section, **Setting the Bed Plate Gap**, to properly set the spacing between the newly sharpened blades and the bed plate.

SETTING THE BED PLATE GAP


The bed plate (also known as the *anvil plate*) is located on the left side of the flywheel housing (when facing the infeed chute). For ideal chipping performance, the gap between the bed plate and the blades should be set to 1/16-1/8" (1.5-3 mm). Follow the steps below to set the gap properly. Failure to set the proper gap can lead to poor chipping performance and/or clogging.

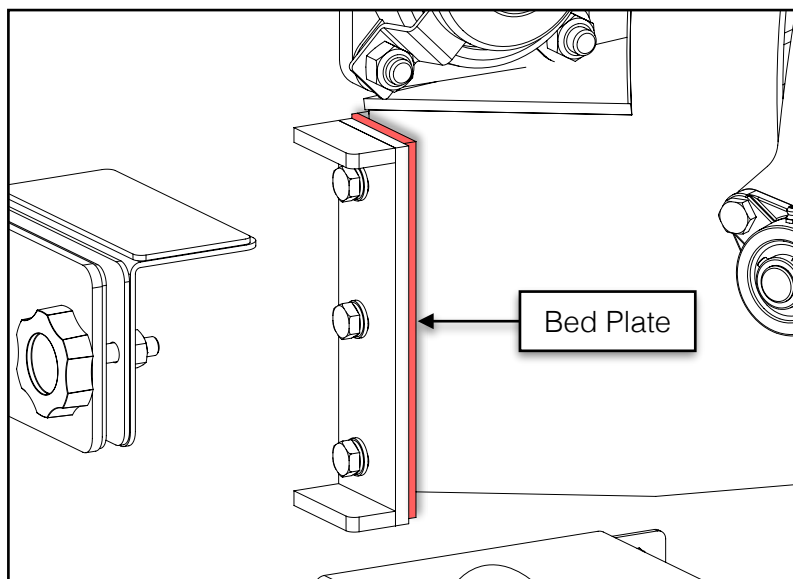


1. If installed, disconnect the PTO shaft from the tractor for safety.
2. Open the upper flywheel housing using a 24 mm socket/wrench by removing the M16 X 40 mm bolt and flat washer securing the upper and lower housings together.

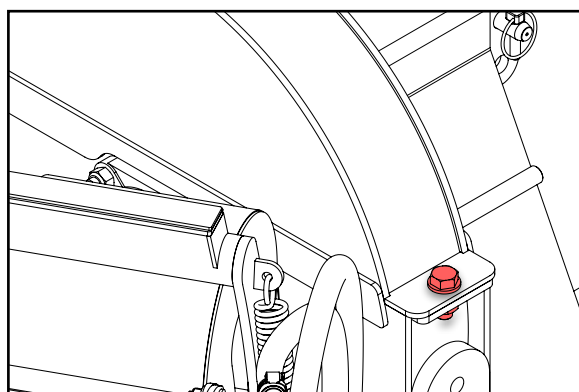

3. With the flywheel exposed, manually rotate it so that the first blade lines up with the bed plate and note the gap between them. Use a flash light for better viewing if necessary. Repeat this process for the remaining three blades, noting which blade is closest. Use this blade to set the bed plate gap.

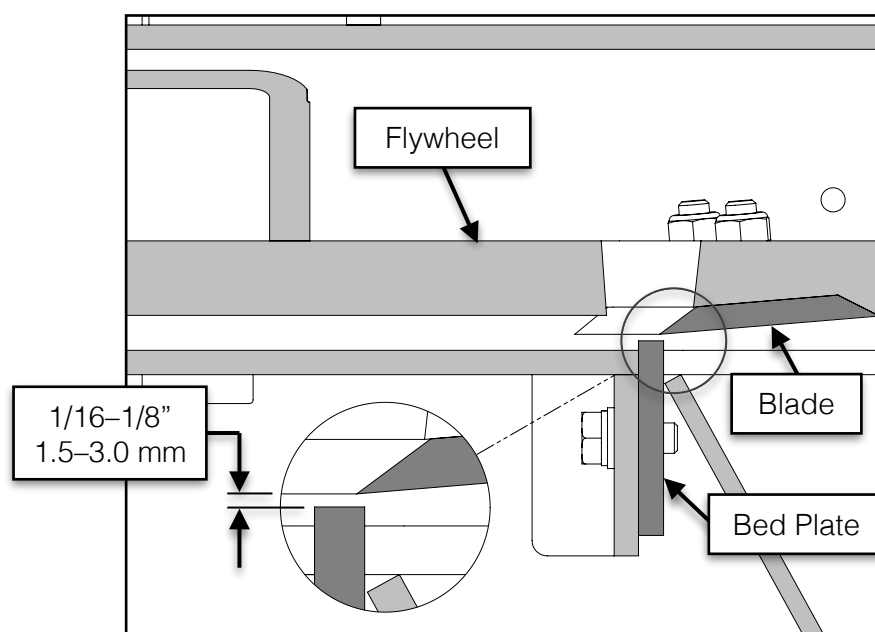

4. Use a socket/wrench to loosen the three (3) M10 X 25 mm hex bolts securing the bed plate to the lower flywheel housing so the bed plate is free to slide in and out. This movement will increase or decrease the gap between the bed plate and the cutting edge of the blade. Slide the bed plate by gripping the knob and adjust its position so that it is within $1/16-1/8"$ (1.5-3.0 mm) of the cutting edge of the blade. Ensure the gap is uniform along the entire edge of the blade.

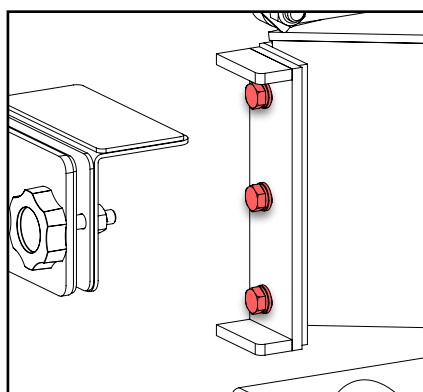


5. Torque the three (3) M10 X 25 mm bed plate hex bolts to 40 ft•lb (54 N•m) once the gap has been set correctly.
6. Rotate the flywheel by hand and note the gap at each blade. Again, the gap should be no more or less than $1/16-1/8"$ (1.5-3.0 mm) at each blade edge.
7. Close the upper flywheel housing and secure it to the lower housing by reinstalling the M16 X 40 mm bolt and flat washer.


ADJUSTING THE DRIVE BELTS' TENSION

Check the condition and tension of the drive belts after every 30 hours of operation. The belts are self-tensioning via two (2) extension springs. The amount of tension can be adjusted by following these steps:

1. If installed, disconnect the PTO shaft from the wood chipper for safety and to allow rotation of the belts and pulleys.
2. Remove the belt guard lock pin by first removing the linch pin and then sliding the lock pin out. Firmly grasp the handle on the top of the belt guard and rotate it downward. Warning: the belt guard is heavy.

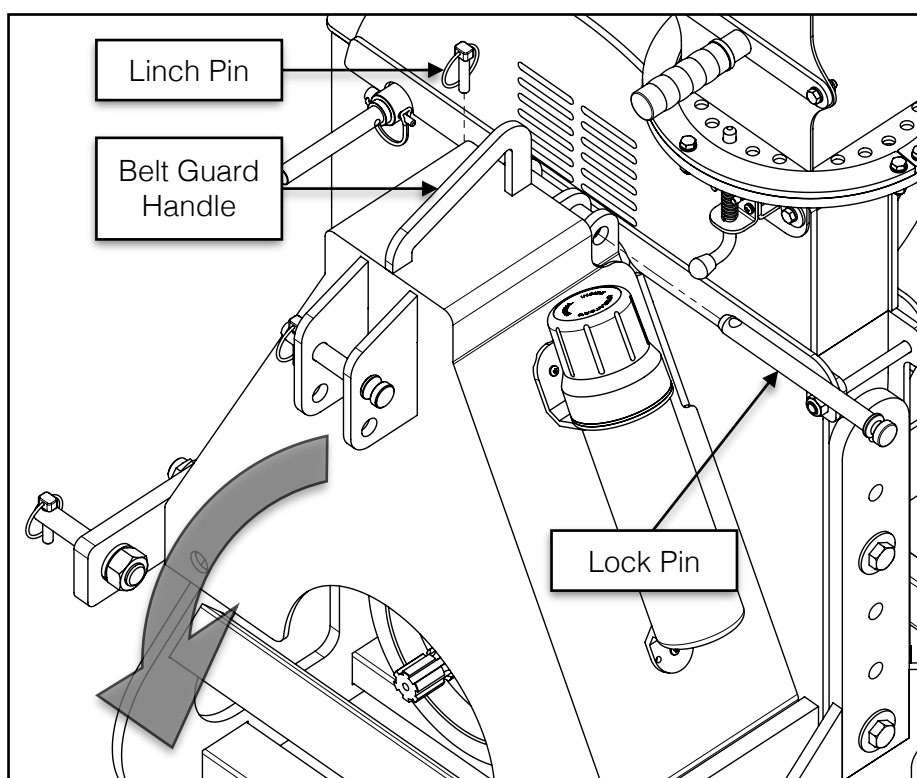

3. Check the tension on the belts by pressing on them with your finger (see "**Checking Belt Tension**" below). There should not be any free slack in the belts. They should be under firm tension and not deflect more than ¼" (6 mm).
4. If the belts require more tension, the eyebolts connected to the spring can be adjusted by moving the M8 hex nuts (see "**Adjusting Belt Tension**" below). This will stretch the springs and increase the belt tension until the proper tension is achieved.
5. The belt guard can now be rotated back upwards and the lock pin reinstalled; secured with the linch pin.

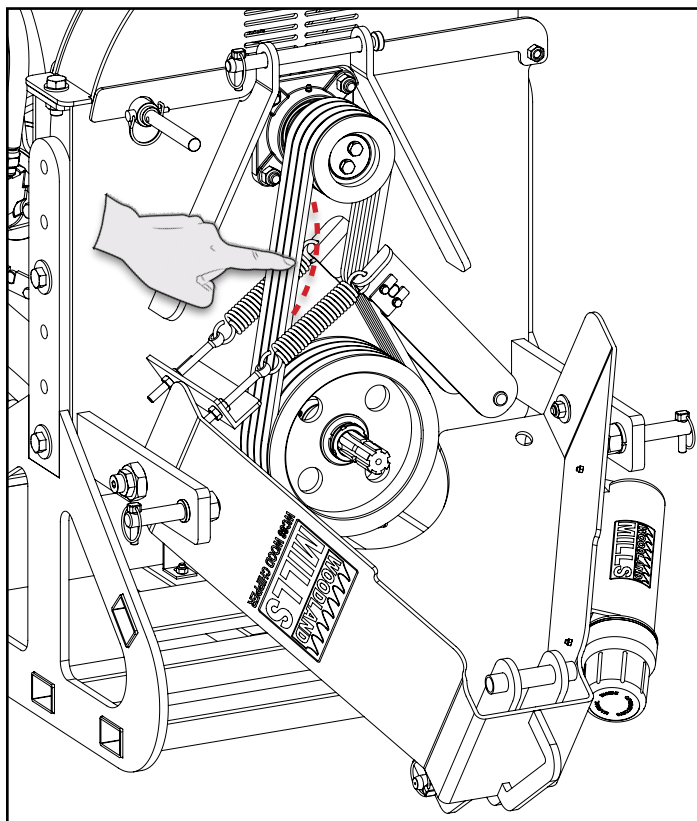


Checking Belt Tension

The belts should not deflect more than $\frac{1}{4}$ " (6 mm) when firm pressure is applied. If the belts are too loose, adjust the tension as shown in "**Adjusting Belt Tension**" shown below.

Adjusting Belt Tension

To increase the tension on the belts, first loosen the jam nuts on both of the eyebolts by rotating them clockwise until they are clear of the support bracket. Then rotate the bottom nuts clockwise, making sure each eyebolt nut is turned an equal amount so that the tension arm belt roller doesn't become skewed.


Once sufficient tension has been imparted to the belts, retighten the jam nuts securely to the support bracket.

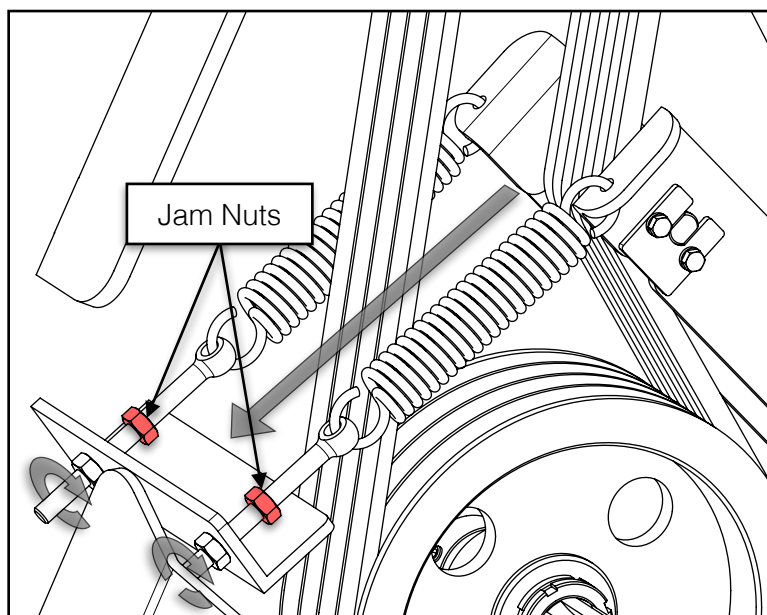


REPLACING THE DRIVE BELTS

Check the condition and tension of the drive belts after every 30 hours of operation. If the infeed roller is not rotating, or it is rotating slowly, the belt could be slipping. A squealing noise may also be heard. In either case, these conditions can occur due to worn belts or improper belt tension (see the previous section, **Adjusting the Drive Belts' Tension**). To replace worn belts, follow the steps below:



1. If installed, disconnect the PTO shaft from the wood chipper for safety.
2. Remove the belt guard lock pin by first removing the linch pin and then sliding the lock pin out. Firmly grasp the handle on the top of the belt guard and rotate it downward. **Warning:** the belt guard is heavy.

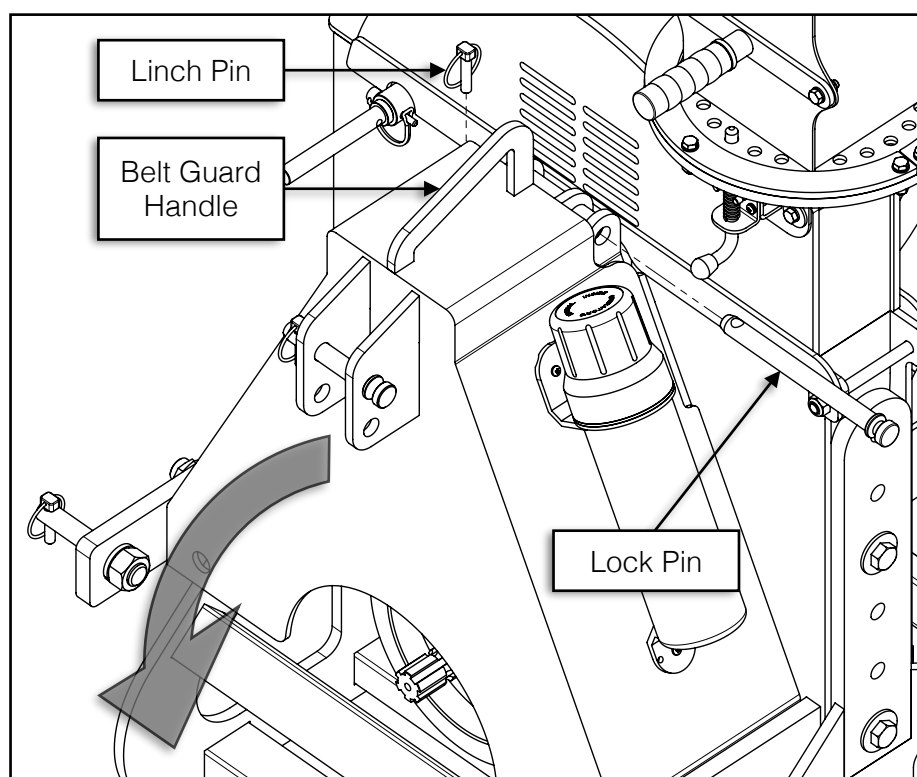

3. Using a 13 mm wrench, loosen the lower M8 hex nuts that secure the eyebolts to the support bracket until sufficient tension has been removed from the springs so the eyebolts can be completely removed from the support bracket. The belt tensioner arm can now be swung up out of the way allowing for removal of the belts from the pulleys.
4. Install the new belt around the pulleys first and then reinstall the spring. Re-tension the spring by tightening the lower M8 hex nut on the eyebolt. Refer to the previous section, **Adjusting the Drive Belts' Tension**, for instructions on how to properly re-tension the belts.

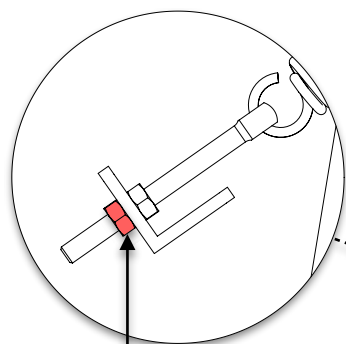

Loosen and remove the lower M8 hex nuts from both of the eyebolts. Be sure to loosen each nut a little at a time so that the tension is released equally from both eyebolts.

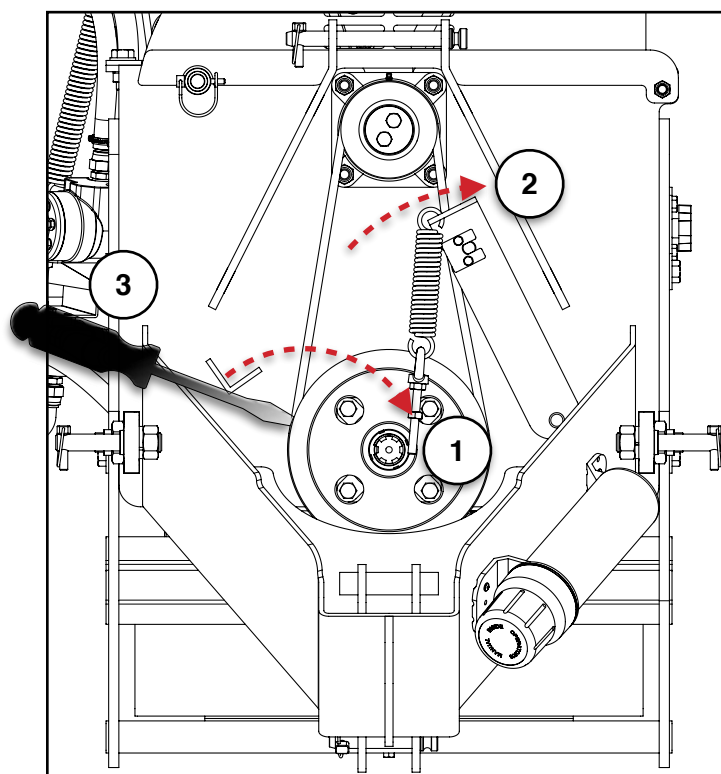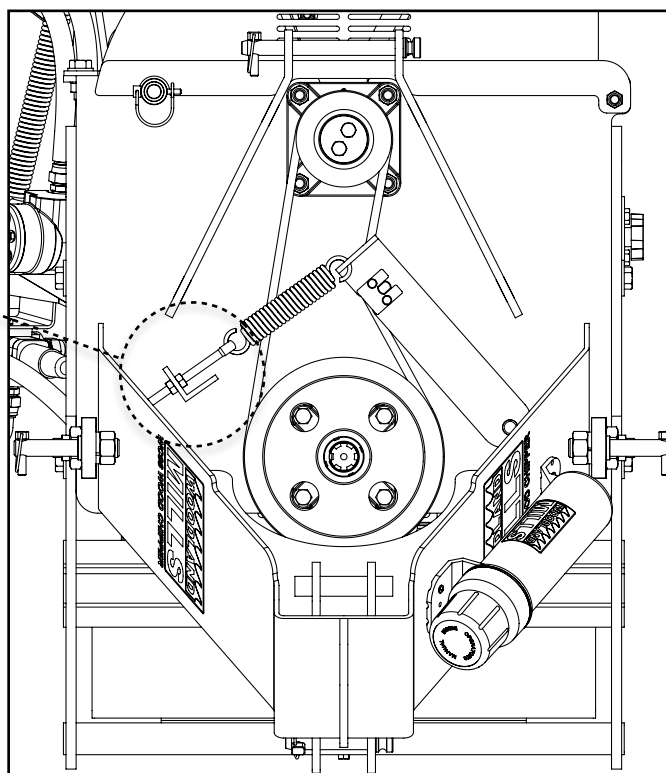

With the eyebolts disconnected from the bracket, let them hang loose from the springs while still attached to the tension arm¹.

With tension removed from the springs, the tension arm can be swung up out of the way².


Use a pry bar or screwdriver to remove the old belts from the pulleys and install new BX53 belts³.

Reassemble the eyebolts to the bracket using the M8 hex nuts and re-tension the springs. Follow the steps in the ***previous section*** to ensure the correct tension is applied to the belts.


Rotate the belt guard up and secure it with the belt guard lock pin and linch pin.

ADJUSTING THE RED CONTROL ARM

If the movement of the red control arm feels too stiff or too loose, or if it falls into neutral or reverse unexpectedly, it can be adjusted via the directional control valve.

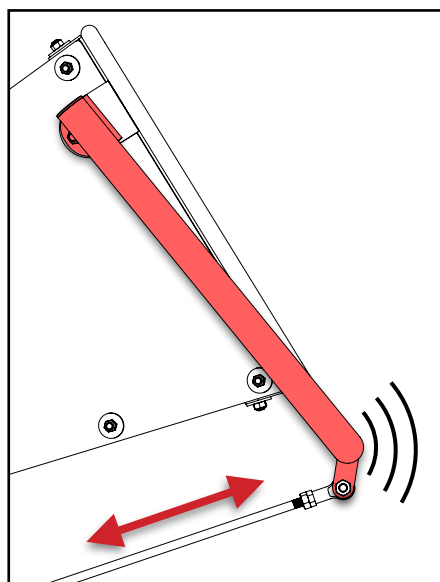

Unscrew the plastic cap from the back of the directional control valve (located under the infeed chute), exposing the jam nut and set screw.

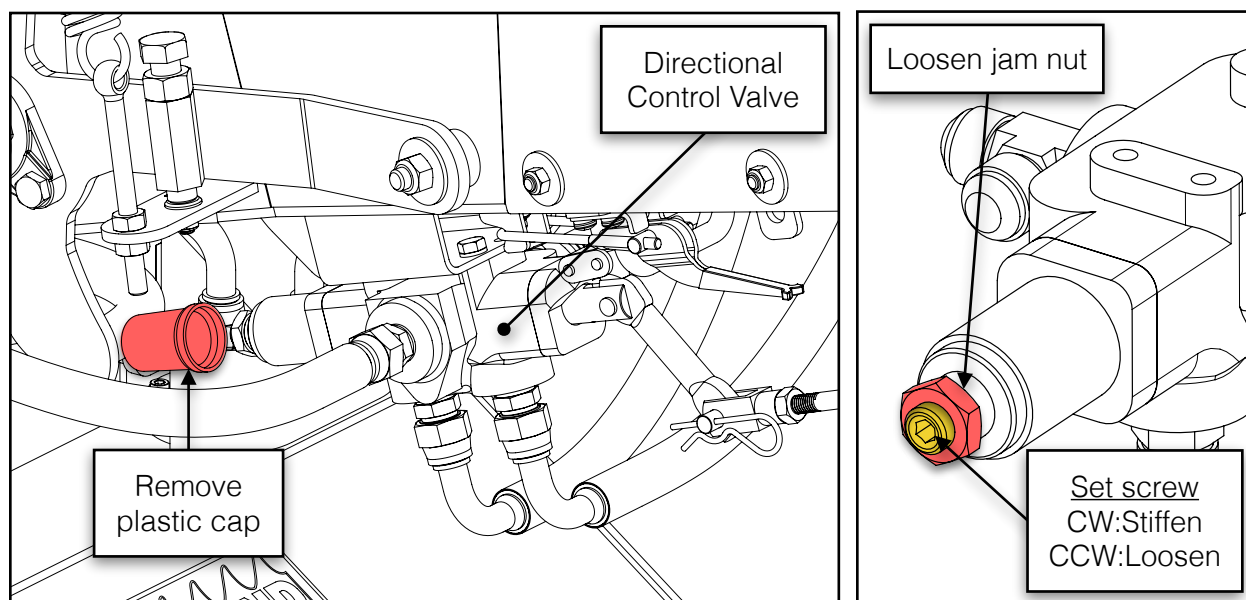


Loosen the jam nut with a 22 mm [$\frac{7}{8}$ in] wrench. Use a 6 mm hex key and turn the set screw **clockwise to stiffen** the movement of the arm, **counter-clockwise to loosen** it. Tighten the jam nut and replace the cap after the control arm movement feels satisfactory.


GREASING BEARINGS AND PTO SHAFT

The wood chipper has eight (8) Zerk fitting grease points: two (2) flywheel shaft bearings, two (2) pump shaft bearings, one (1) infeed roller bearing, and three (3) on the PTO shaft. Check each grease point prior to use and add grease as needed.


*****Warning: These grease points come pre-greased from the factory. Do not add grease to these points on a new wood chipper. Over-greasing can damage the bearing seals.*****

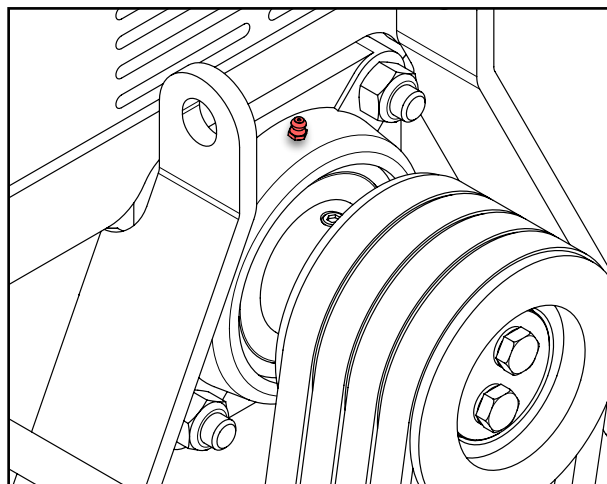


Front Flywheel Shaft Bearing

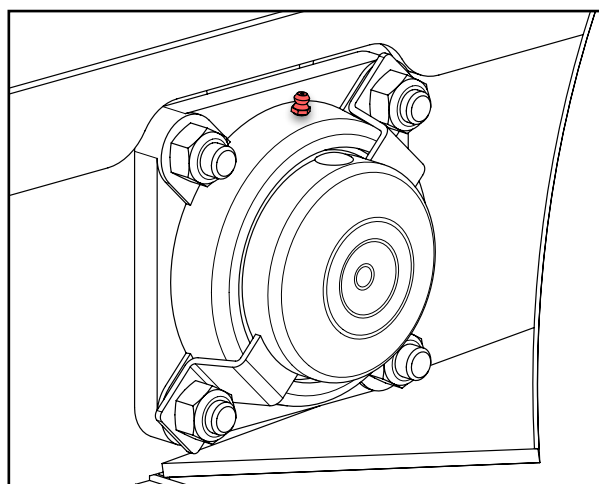


Rear Flywheel Shaft Bearing

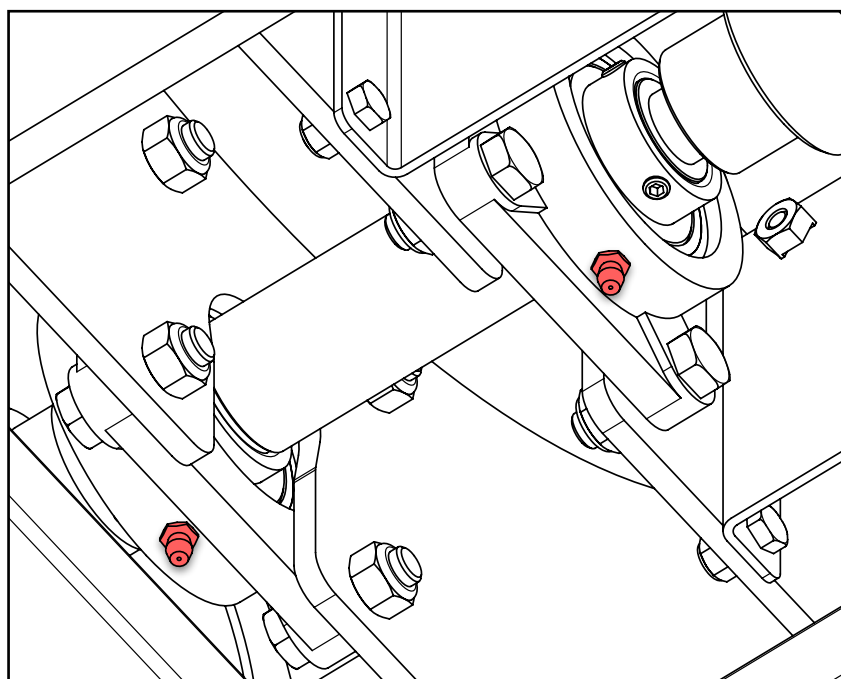


Front and Rear Pump Shaft Bearings
(Underside of flywheel housing)

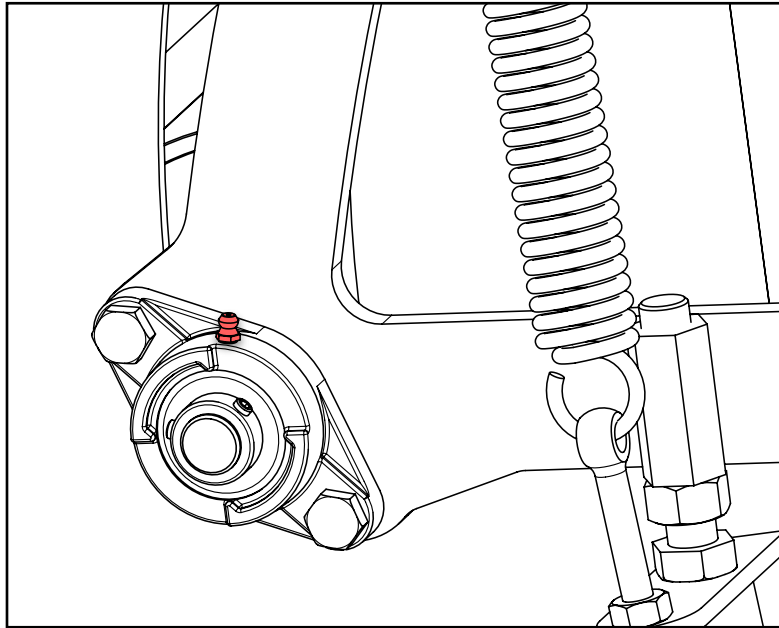

Infeed Roller Bearing

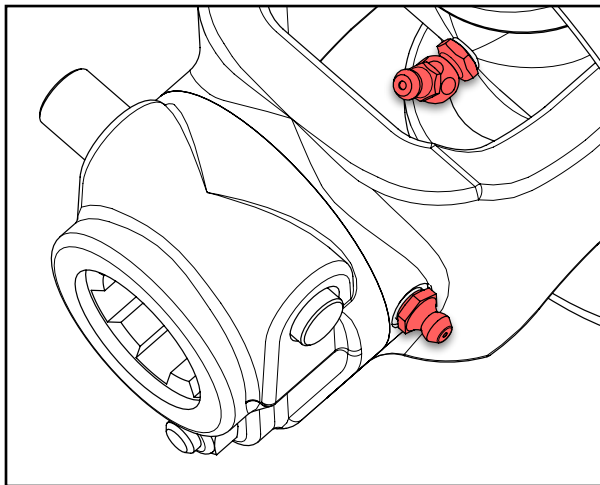

PTO Shaft U-Joint 1




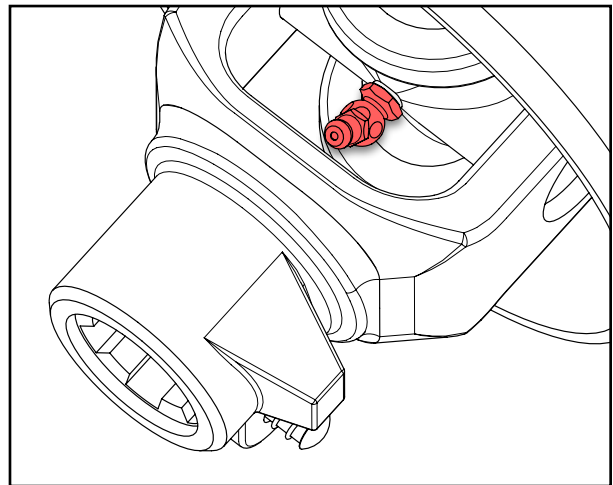


PTO Shaft U-Joint 2

STORAGE

When the wood chipper is not in use, it can be stored to utilize a smaller footprint to save space. Follow these steps to put the wood chipper in its storage state:

1. Disconnect the control bar linkage from the directional control valve and reconnect it to the tab on the underside of the infeed chute bottom panel.
2. Disengage the two (2) latches on the underside of the infeed chute bottom panel.
3. Rotate the discharge chute so that it points to the right and then rotate the deflector until it points down.
4. Swing the infeed chute up until it is resting on the swingarm.

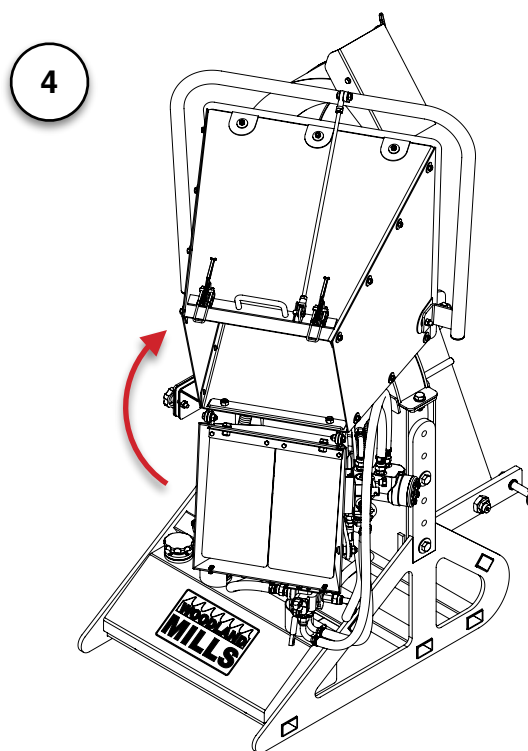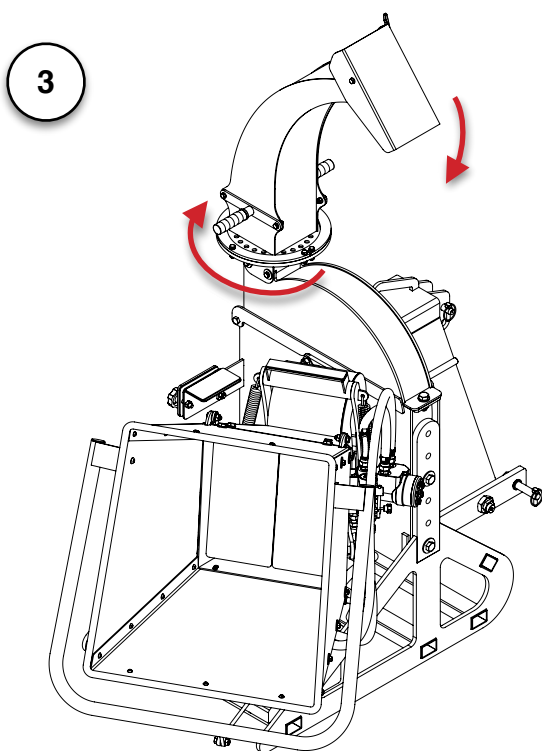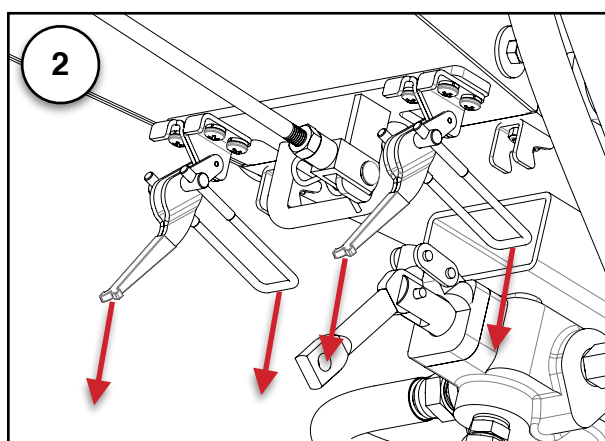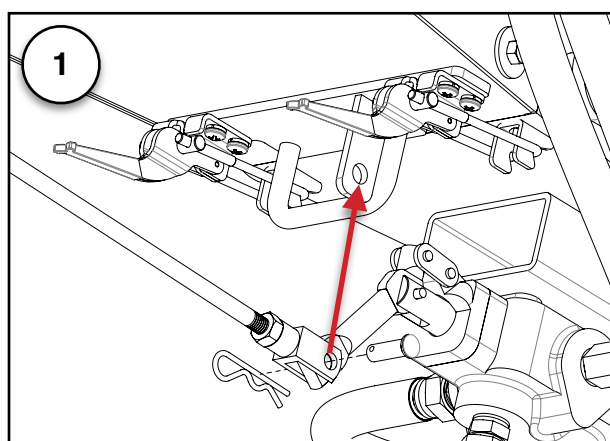



TROUBLESHOOTING

Problem/Issue	Possible Causes	Resolution Options
Brush is feeding too slowly	<ol style="list-style-type: none"> 1. Infeed roller control set too low. 2. PTO RPM below 540. 3. Blades are dull. 4. Improper bed plate gap. 	<ol style="list-style-type: none"> 1. Increase infeed roller control to a higher value. Refer to page 32. 2. Adjust tractor RPMs to 540 at output. 3. Reverse, sharpen, or replace blades. Refer to page 36 & page 38. 4. Re-set bed plate gap. Refer to page 39.
Brush exiting discharge chute is stringy	<ol style="list-style-type: none"> 1. Blades are dull. 2. Brush is excessively sappy. 	<ol style="list-style-type: none"> 1. Reverse, sharpen, or replace blades. Refer to page 36 & page 38. 2. Clean blades and bed plate.
Excessive clogging	<ol style="list-style-type: none"> 1. Blades are dull. 2. Improper bed plate gap. 3. PTO RPM below 540. 	<ol style="list-style-type: none"> 1. Reverse, sharpen, or replace blades. Refer to page 36 & page 38. 2. Re-set bed plate gap. Refer to page 39. 3. Clean blades and bed plate. 4. Adjust tractor RPMs to 540 at output.
Drive belts slipping or squeaking	<ol style="list-style-type: none"> 1. Belt tension not set properly. 2. Belts are old/worn. 	<ol style="list-style-type: none"> 1. Adjust belts' tension. Refer to page 41. 2. Replace belts. Refer to page 43.
Excessive noise coming from flywheel bearings	<ol style="list-style-type: none"> 1. Bearings not sufficiently lubricated. 2. Bearings are worn. 	<ol style="list-style-type: none"> 1. Grease bearings. Refer to page 46. 2. Replace bearings. Please contact Woodland Mills for bearing replacement instructions.
Red control arm falls into neutral or reverse	<ol style="list-style-type: none"> 1. Directional control valve not adjusted properly. 	<ol style="list-style-type: none"> 1. Adjust directional control valve set screw. Refer to page 45.



PARTS LIST

Item	Qty	Part No.	Description
1	1	0001248	BASE
2	1	0001168	HYDRAULIC TANK, 20 L [5.3 gal]
3	1	0001164	HYDRAULIC TANK INTAKE LINE
4	1	1752000	HYDRAULIC INTAKE FILTER, 1/2 NPT
5	1	0004841	O-RING, 50 mm ID / 57 mm OD, 3.5 mm THK
6	1	0005188	OIL SCREEN, 50 mm DIA X 120 mm LG SCREEN
7	1	0005183	OIL SCREEN CAP, 85 mm DIA, M48 X 2 THD
8	1	0005187	GASKET, OIL SCREEN, 55 mm ID
9	1	0005186	GASKET, OIL SCREEN CAP, 48 mm ID
10	1	0005185	RETAINING RING, INTERNAL, 46 mm BORE (48.5 mm GROOVE)
11	1	0004683	LOWER FLYWHEEL HOUSING
12	1	0001258	INNER HINGE, INFEED CHUTE
13	1	0001298	CURTAIN BRACKET
14	2	0001299	CURTAIN
15	1	0001301	CURTAIN PLATE
16	1	0001295	SWINGARM
17	2	0001872	SWINGARM PIVOT BUSHING, 6 mm SHOULDER
18	2	0001812	EXTENSION SPRING, HOOK ENDS, 33 mm OD, 5 mm DIA WIRE, 285 mm LG
19	1	0001179	HYDRAULIC MOTOR ADAPTER PLATE, 6205-2RS BEARING
20	1	0004861	HYDRAULIC MOTOR
21	1	0004846	PARALLEL KEY, 8 X 7 mm, 25 mm LG
22	1	0001589	INFEED ROLLER
23	1	0001201	INFEED ROLLER COVER PLATE
24	2	0001284	ROLLER SHAFT, 19 mm OD, 162 mm LG
25	2	0001285	ROLLER, 38 mm DIA, 196 mm LG
26	2	0001286	DOUBLE ROLLER SHAFT LOCKING PLATE
27	1	0001294	BED PLATE, 205 X 64 X 8.25 mm
28	2	0001576	3-POINT HITCH PIN, LOWER, M24 X 3, 21 mm DIA, 64 mm USEABLE LG
29	1	0001156	3-POINT HITCH PIN, UPPER, 19 mm DIA, 90 mm USEABLE LG
30	4	0004705	LINCH PIN, 10 mm DIA, 38 mm USEABLE LG
31	1	0001272	FLYWHEEL
32	4	0001273	FLYWHEEL BLADE, 113 X 69 X 8 mm
33	1	0001269	FLYWHEEL SHAFT
34	1	0004852	PARALLEL KEY, 12 X 12 mm, 50 mm LG
35	1	0001874	V-BELT PULLEY, 4-GROOVE, 40 mm SHAFT, 120 mm DIA
36	4	0001158	SPACER, 50.6 ID X 56 OD X 1.5 mm THK
37	1	0001270	FLYWHEEL SHAFT RETAINING PLATE
38	1	0001184	FLYWHEEL SHAFT COVER, UCF210 BEARING
39	1	0001795	FLYWHEEL SHAFT COVER PLUG
40	1	0001568	FLYWHEEL LOCKING PIN
41	1	0004728	LOCKING PIN, ROUND, 1/4 in DIA, 1-3/8 in USEABLE LG
42	1	0001264	PUMP SHAFT
43	1	0001274	PUMP SHAFT HOUSING
44	1	0001275	PUMP SHAFT HOUSING LID
45	1	0004868	HYDRAULIC GEAR PUMP, 10 mL/r, SPLINED SHAFT



Item	Qty	Part No.	Description
46	1	0001571	FLEXIBLE SHAFT COUPLING, 24 mm SHAFT TO 12 mm SPLINED SHAFT
47	1	0004848	PARALLEL KEY, 8 X 8 mm, 40 mm LG
48	1	0001271	LOWER SHAFT SPACER, 40 ID X 50 OD X 18 mm LG
49	2	0001734	SPACER, 40.6 ID X 46 OD X 1.5 mm THK
50	1	0001875	V-BELT PULLEY, 4-GROOVE, 40 mm SHAFT, 250 mm DIA
51	1	0004851	PARALLEL KEY, 12 X 10 mm, 60 mm LG
52	1	0001265	BELT TENSIONER ARM
53	1	0003552	BELT TENSIONER ARM BUSHING, 20 ID X 35 OD X 44 mm LG
54	1	0003882	SPACER, POM, 20 ID X 32 OD X 3 mm LG
55	1	0001266	ROLLER SHAFT, 19 mm DIA, 63.6 mm LG
56	1	0001267	ROLLER, 38 mm DIA, 96 mm LG
57	6	0004798	RETAINING RING, EXTERNAL, 17 mm SHAFT (16.2 mm GROOVE)
58	2	0001268	SINGLE ROLLER SHAFT LOCKING PLATE
59	2	0001873	EXTENSION SPRING, HOOK ENDS, 33 mm OD, 5 mm DIA WIRE, 165 mm LG
60	2	0001577	ECCENTRIC BUSHING, M30 X 3.5, 30 mm LG, 16 mm THRU, 3 mm ECCENTRICITY
61	1	0003142	BELT GUARD
62	1	0001575	LOCKING PIN, 19 mm DIA, 180 mm USEABLE LG
63	1	0001276	CHAINSAW HOLDER MOUNTING BRACKET
64	1	0001283	CHAINSAW HOLDER TOP RUBBER PAD
65	2	0002699	SPACER, 11 ID X 21 OD X 11 mm LG
66	1	0001277	CHAINSAW HOLDER CLAMPING PLATE
67	2	0001236	CHAINSAW HOLDER RUBBER MAT
68	1	0001910	KNOB, MULTI-LOBE, 58 mm OD, M10 X 1.5, 45 mm LG
69	1	0004872	DIRECTIONAL CONTROL VALVE
70	1	0004875	VARIABLE FLOW CONTROL VALVE, 1/2 in NPT, 0-16 gal/min
71	2	0001304	LATCH-STYLE TOGGLE CLAMP
72	1	0001259	INFEED CHUTE TOP PANEL
73	1	0001262	OUTER HINGE, INFEED CHUTE
74	2	0001261	INFEED CHUTE SIDE PANEL
75	1	0001260	INFEED CHUTE BOTTOM PANEL
76	1	0001288	ROUND EDGE BAR, INFEED CHUTE
77	1	0001287	CONTROL ARM, INFEED ROLLER
78	2	0001781	PLASTIC END CAP, 38 mm DIA
79	1	0001289	LINKAGE ROD, INFEED ROLLER
80	1	0004834	CLEVIS ROD END, M10 X 1.5 THD, 10 mm ID, 10 mm JAW OPENING
81	1	0004749	CLEVIS PIN, 10 mm DIA, 24 mm USABLE LG, 30 mm LG
82	1	0004760	HAIRPIN COTTER PIN, 10-16 mm CLEVIS, 3 mm WIRE DIA
83	1	0004888	ROD END BEARING, 10 mm, M10 X 1.5 FEM THD
84	1	0002807	UPPER FLYWHEEL HOUSING
85	1	0002806	DISCHARGE CHUTE NOZZLE
86	1	0001172	DISCHARGE CHUTE LOCK PIN ASSEMBLY, 12 mm DIA
87	1	0001441	DISCHARGE CHUTE
88	2	0001170	DISCHARGE CHUTE RETAINER PLATE
89	2	0001175	DISCHARGE CHUTE ROTATION HANDLE
90	2	0001030	HANDLE GRIP, GROOVED, 26 mm ID, 108 mm LG
91	1	0001177	DISCHARGE CHUTE DEFLECTOR
92	1	0001786	ADJUSTABLE HANDLE, 78 X 54 mm, M10 X 1.5
93	1	0001655	MANUAL TUBE




Item	Qty	Part No.	Description
94	10	0005124	FITTING, ADAPTER, 1/2 in NPT MALE TO 7/8-14 UNF MALE
95	1	0004911	FITTING, TEE, 1/2 NPT TO 7/8-14 (2X)
96	1	0005115	FITTING, ELBOW, 90°, 1/2 NPT TO 7/8-14 THD
97	2	0003297	HYDRAULIC LINE ASSEMBLY, STR AND ELB FITTINGS, 350 mm LG
98	3	0003298	HYDRAULIC LINE ASSEMBLY, STR AND ELB FITTINGS, 500 mm LG
99	1	0003300	HYDRAULIC LINE ASSEMBLY, STR AND ELB FITTINGS, 600 mm LG
100	1	0003303	HYDRAULIC LINE ASSEMBLY, STR AND ELB FITTINGS, 1450 mm LG
101	1	0001761	PTO SHAFT W/ SHEAR BOLT, TRIMMABLE, 31-38 in (790-973 mm)
101.1	1	0003069	COVER/RETAINING CLIP KIT, PTO SHAFT W/ SHEAR BOLT
101.2	1	0003073	RETAINING CLIP KIT, PTO SHAFT W/ SHEAR BOLT
101.3	1	HDW	HEX BOLT, M8 X 1.25, 50 mm LG, 22 mm LG THD
101.4	1	HDW	LOCK NUT, M8 X 1.25
102	4	BX53	V-BELT, COGGED, BX53
103	6	6003-2RS	BALL BEARING, SEALED, 6003-2RS, 17 mm BORE, 35 mm OD, 10 mm WIDE
104	1	6205-2RS	BALL BEARING, SEALED, 6205-2RS, 25 mm BORE, 52 mm OD, 15 mm WIDE
105	1	UCF207	FLANGE BEARING, SQ, 4-BOLT, UCF207, 35 mm BORE, 92 mm C-C
106	1	UCF208	FLANGE BEARING, SQ, 4-BOLT, UCF208, 40 mm BORE, 102 mm C-C
107	2	UCF210	FLANGE BEARING, SQ, 4-BOLT, UCF210, 50 mm BORE, 111 mm C-C
108	1	UCFL204	FLANGE BEARING, OVAL, 2-BOLT, UCFL204, 20 mm BORE, 90 mm C-C
109	3	HDW	HEX BOLT, M6 X 1, 10 mm LG
110	4	HDW	HEX BOLT, M6 X 1, 12 mm LG
111	4	HDW	HEX BOLT, M6 X 1, 20 mm LG
112	2	HDW	HEX BOLT, M6 X 1, 60 mm LG, 18 mm LG THD
113	4	HDW	HEX BOLT, M8 X 1.25, 14 mm LG
114	6	HDW	HEX BOLT, M8 X 1.25, 16 mm LG
115	10	HDW	HEX BOLT, M8 X 1.25, 20 mm LG
116	5	HDW	HEX BOLT, M8 X 1.25, 25 mm LG
117	4	HDW	HEX BOLT, M8 X 1.25, 30 mm LG
118	6	HDW	HEX BOLT, M8 X 1.25, 35 mm LG
119	1	HDW	HEX BOLT, M8 X 1.25, 55 mm LG, 22 mm LG THD
120	2	HDW	HEX BOLT, M8 X 1.25, 80 mm LG, 22 mm LG THD
121	5	HDW	HEX BOLT, M10 X 1.5, 25 mm LG
122	3	HDW	HEX BOLT, M10 X 1.5, 35 mm LG
123	2	HDW	HEX BOLT, M10 X 1.5, 45 mm LG
124	2	HDW	HEX BOLT, M12 X 1.75, 25 mm LG
125	2	HDW	HEX BOLT, M12 X 1.75, 30 mm LG
126	8	HDW	HEX BOLT, M12 X 1.75, 40 mm LG
127	2	HDW	HEX BOLT, M12 X 1.75, 50 mm LG
128	1	HDW	HEX BOLT, M12 X 1.75, 140 mm LG, 30 mm LG THD
129	1	HDW	HEX BOLT, M16 X 2, 40 mm LG
130	4	HDW	HEX BOLT, M16 X 2, 60 mm LG, 38 mm LG THD
131	2	HDW	HEX BOLT, M16 X 2, 80 mm LG, 38 mm LG THD
132	4	HDW	EYEBOLT, DIN444, M10 X 1.5, 120 mm LG
133	19	HDW	BUTTON HEAD SCREW, M8 X 1.25, 18 mm LG
134	2	HDW	BUTTON HEAD SCREW, M12 X 1.75, 50 mm LG
135	2	HDW	BUTTON HEAD SCREW, M10 X 1.5, 35 mm LG
136	4	HDW	SCREW, PPH, M5 X 0.8, 16 mm LG
137	3	HDW	SCREW, PPH, M5 X 0.8, 20 mm LG




Item	Qty	Part No.	Description
138	8	HDW	SCREW, PPH, M6 X 1, 10 mm LG
139	4	HDW	SCREW, PPH, M6 X 1, 14 mm LG
140	8	HDW	SCREW, HFH, M10 X 1.5, 40 mm LG, CL 10.9
141	8	HDW	SCREW, HFH, M14 X 2, 45 mm LG
142	4	HDW	SHCS, M5 X 0.8, 14 mm LG
143	4	HDW	SHCS, M6 X 1, 20 mm LG
144	4	HDW	SHCS, M16 X 2, 50 mm LG
145	2	HDW	SHLDR SCREW, HEX HEAD, 11 X 15 mm LG SHLDR, M10 X 1.5 X 20 mm LG THD
146	2	HDW	SHLDR SCREW, 16 X 55 mm SHLDR, M12 X 1.75 X 18 mm LG THD
147	2	HDW	SET SCREW, FLAT TIP, M6 X 1, 6 mm LG
148	1	HDW	SET SCREW, FLAT TIP, M6 X 1, 8 mm LG
149	8	HDW	FLAT WASHER, M5
150	24	HDW	FLAT WASHER, M8
151	3	HDW	FLAT WASHER, DIN7349, M10, 4 mm THK
152	4	HDW	FLAT WASHER, M12
153	6	HDW	FLAT WASHER, M12, 25.1 mm OD, NYLON
154	3	HDW	FLAT WASHER, M16
155	24	HDW	FENDER WASHER, M8, 30 mm OD
156	1	HDW	FENDER WASHER, M10, 26 mm OD
157	2	HDW	FENDER WASHER, M10, 30 mm OD
158	4	HDW	FENDER WASHER, M12, 37 mm OD
159	4	HDW	FENDER WASHER, M16, 45 mm OD
160	19	HDW	SPLIT LOCK WASHER, M6
161	11	HDW	SPLIT LOCK WASHER, M8
162	5	HDW	SPLIT LOCK WASHER, M10
163	2	HDW	SPLIT LOCK WASHER, M24
164	1	HDW	HEX NUT, M10 X 1.25
165	9	HDW	HEX NUT, M10 X 1.5
166	2	HDW	HEX NUT, M16 X 2
167	2	HDW	HEX NUT, M24 X 3
168	2	HDW	HEX NUT, THIN, M30 X 3.5, 15 mm THK
169	7	HDW	LOCK NUT, M5 X 0.8
170	10	HDW	LOCK NUT, M6 X 1
171	46	HDW	LOCK NUT, M8 X 1.25
172	17	HDW	LOCK NUT, M10 X 1.5
173	19	HDW	LOCK NUT, M12 X 1.75
174	8	HDW	LOCK NUT, M14 X 2
175	6	HDW	LOCK NUT, M16 X 2
176	2	HDW	SLOTTED NUT, ROUND, M40 X 1.5

EXPLODED ASSEMBLY VIEWS COMPLETE ASSEMBLY

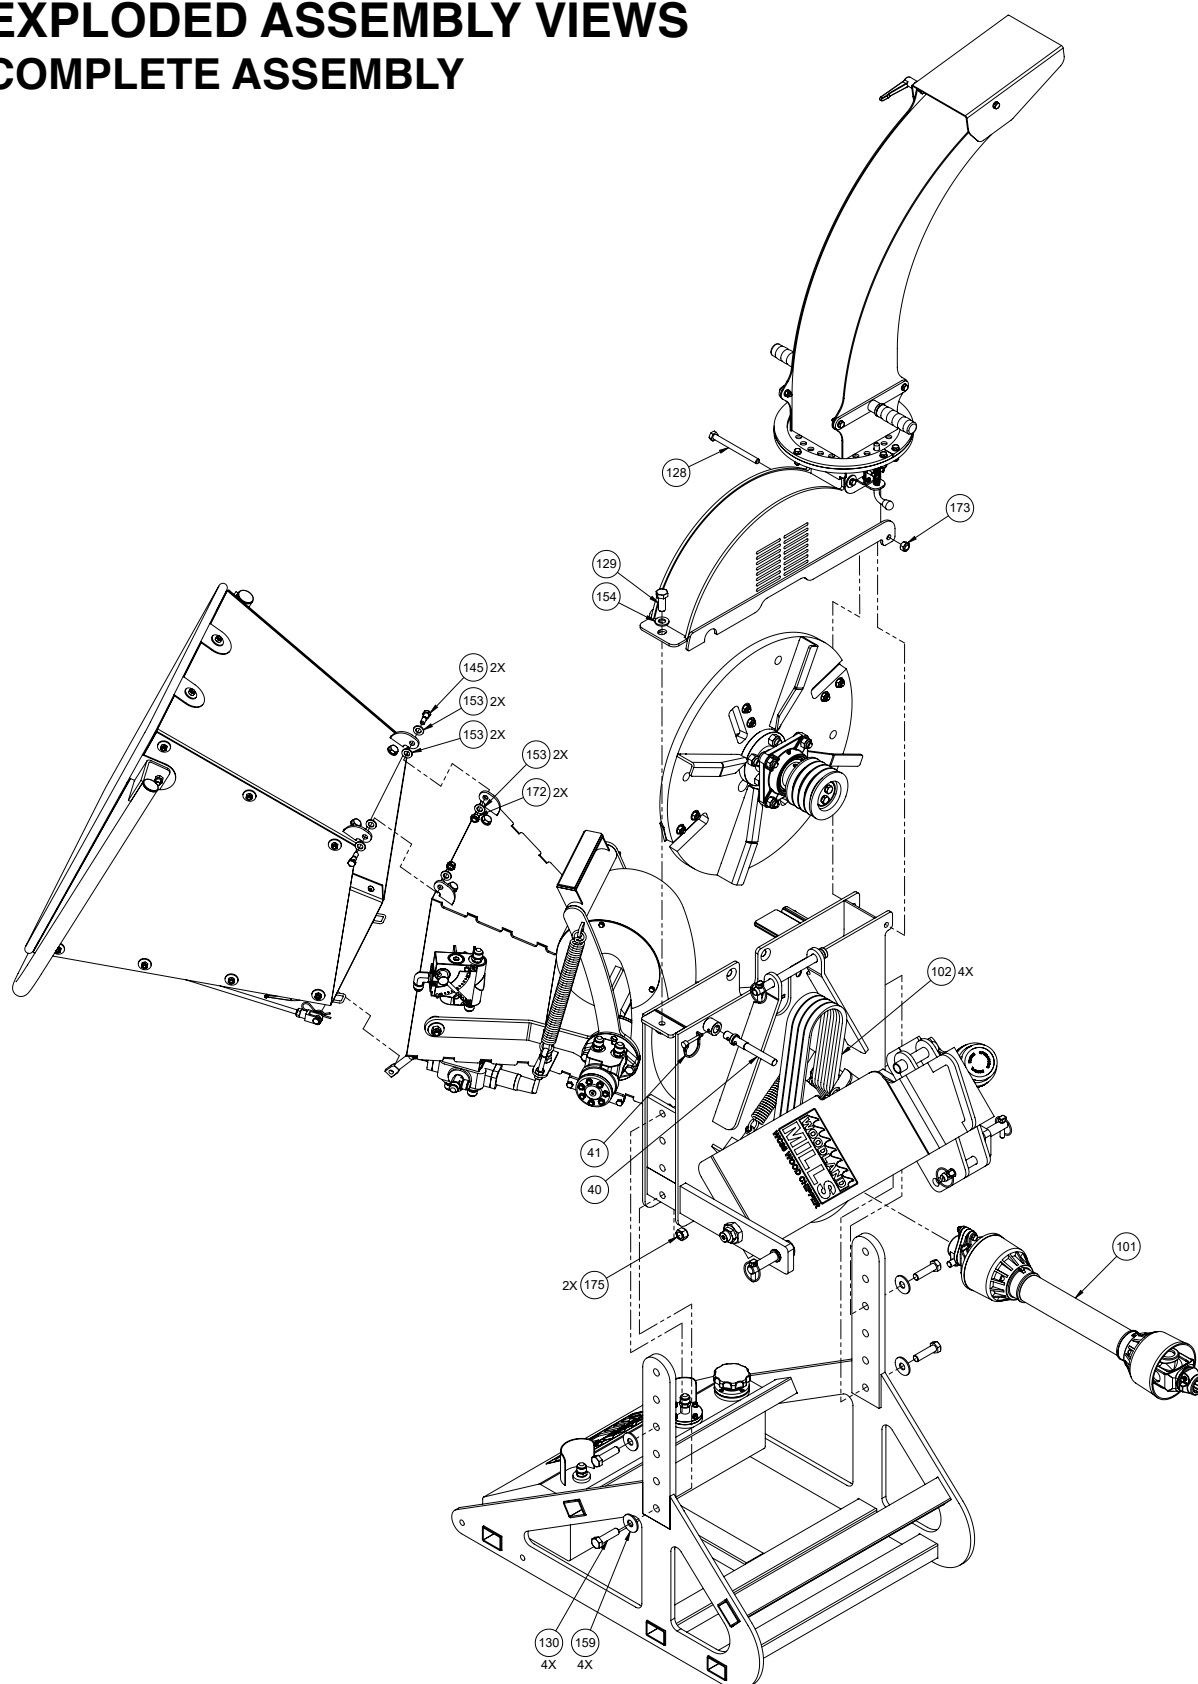



BASE

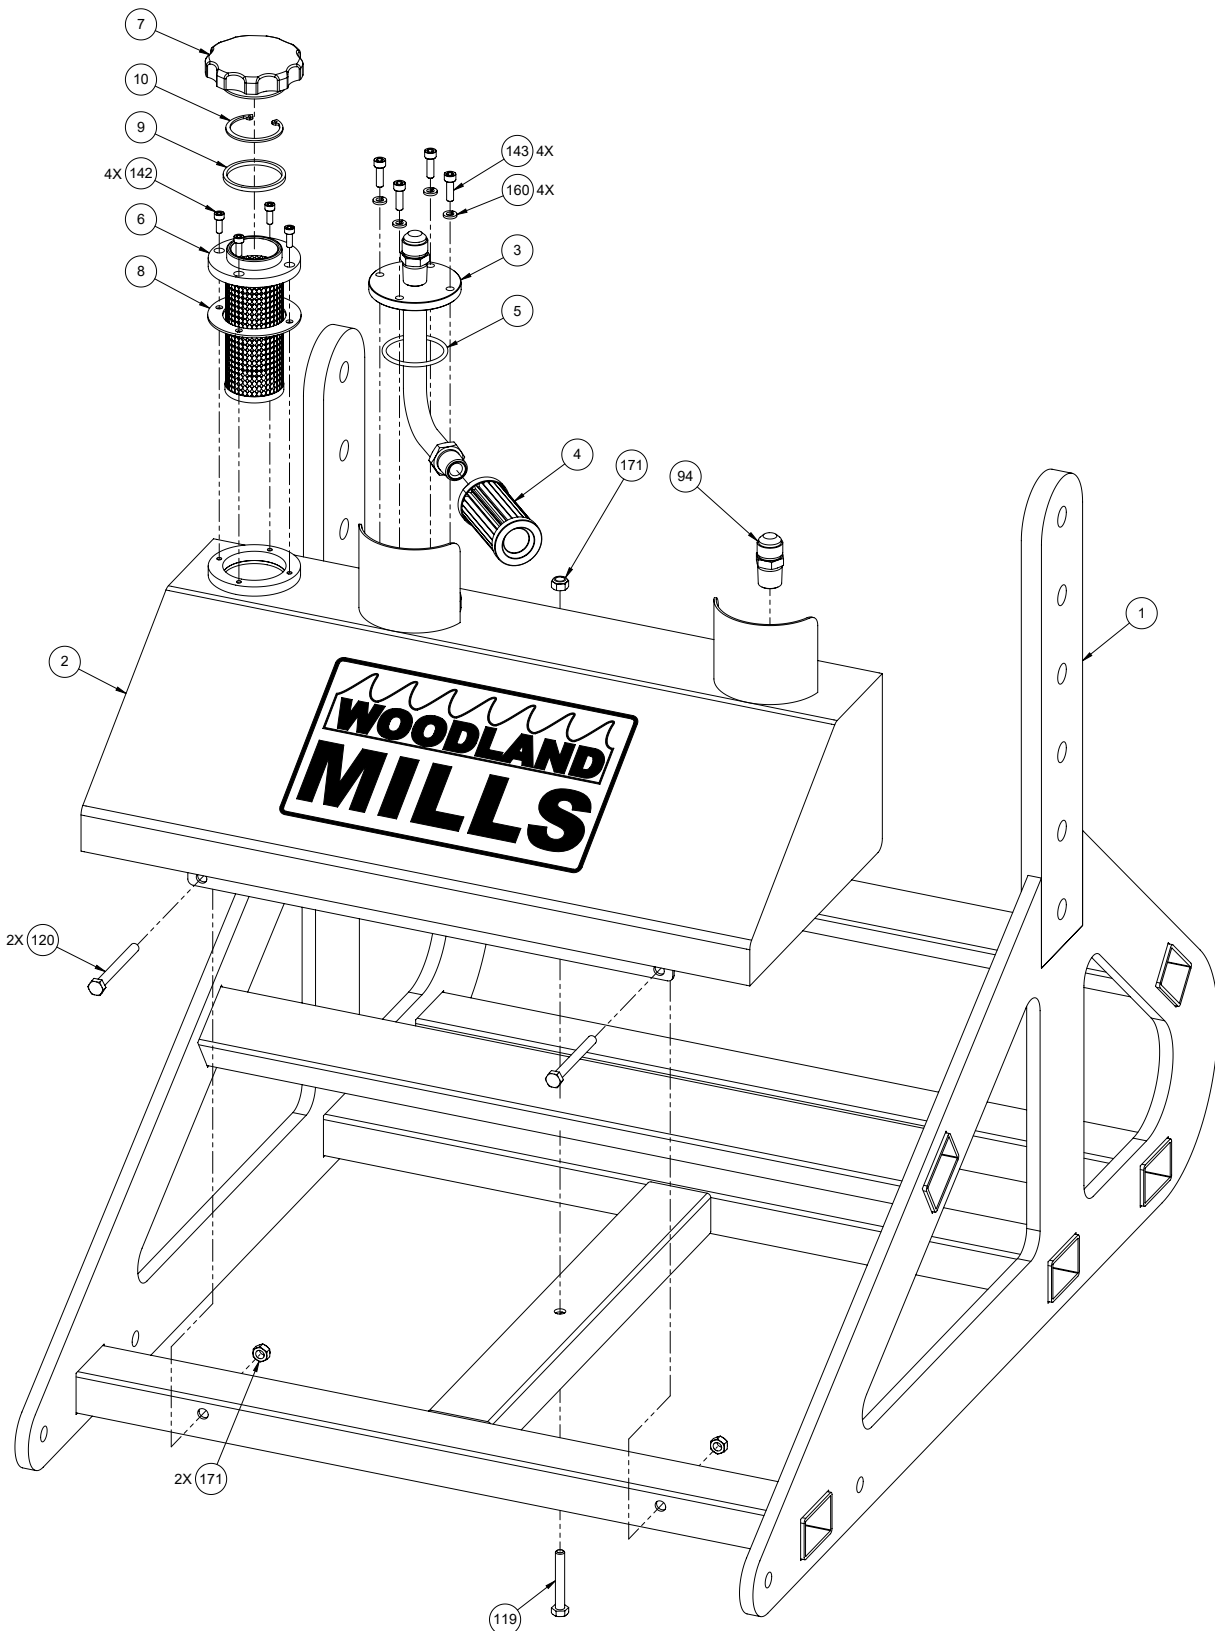


WOODLAND MILLS 1800 WOOD CHIPPER

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284 285 286 287 288 289 290 291 292 293 294 295 296 297 298 299 300 301 302 303 304 305 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347 348 349 350 351 352 353 354 355 356 357 358 359 360 361 362 363 364 365 366 367 368 369 370 371 372 373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 392 393 394 395 396 397 398 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 425 426 427 428 429 430 431 432 433 434 435 436 437 438 439 440 441 442 443 444 445 446 447 448 449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 537 538 539 540 541 542 543 544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571 572 573 574 575 576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605 606 607 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637 638 639 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668 669 670 671 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698 699 700 701 702 703 704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733 734 735 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765 766 767 768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797 798 799 800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829 830 831 832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 869 870 871 872 873 874 875 876 877 878 879 880 881 882 883 884 885 886 887 888 889 890 891 892 893 894 895 896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925 926 927 928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956 957 958 959 960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987 988 989 990 991 992 993 994 995 996 997 998 999 1000




FLYWHEEL

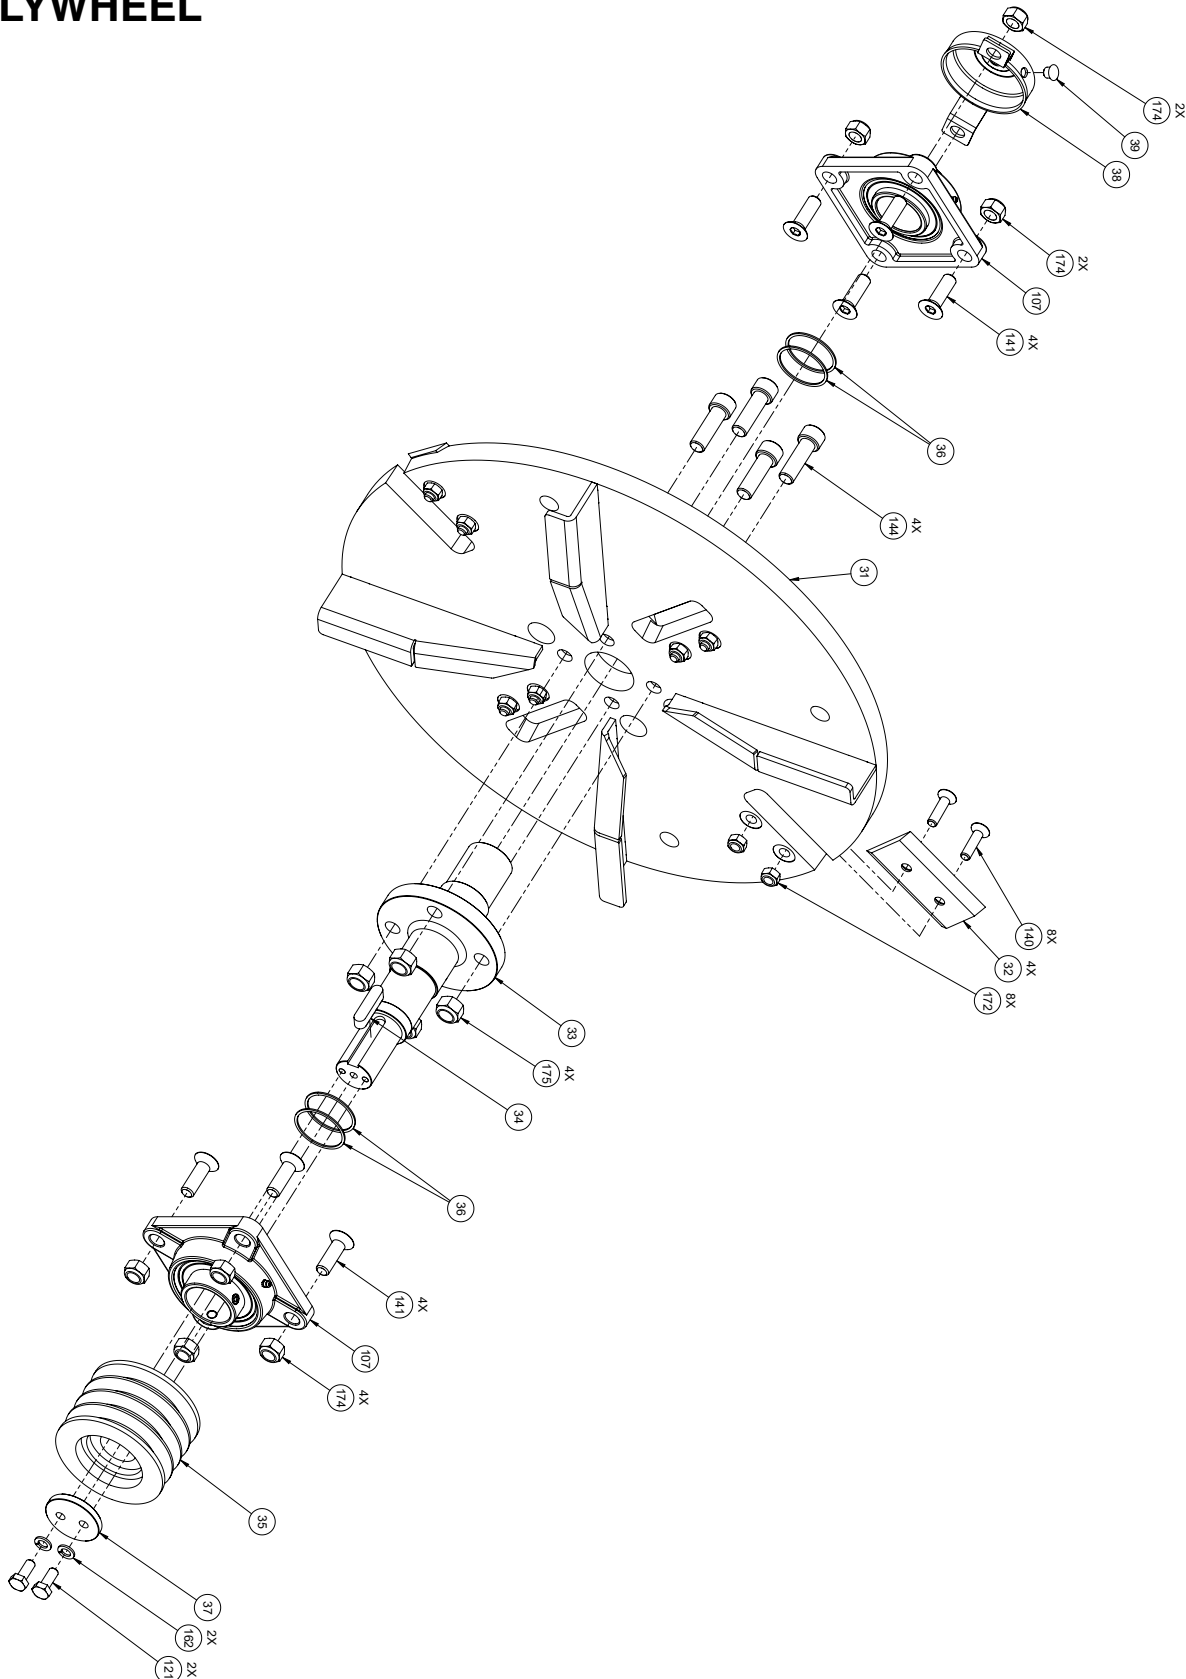




INFEED CHUTE

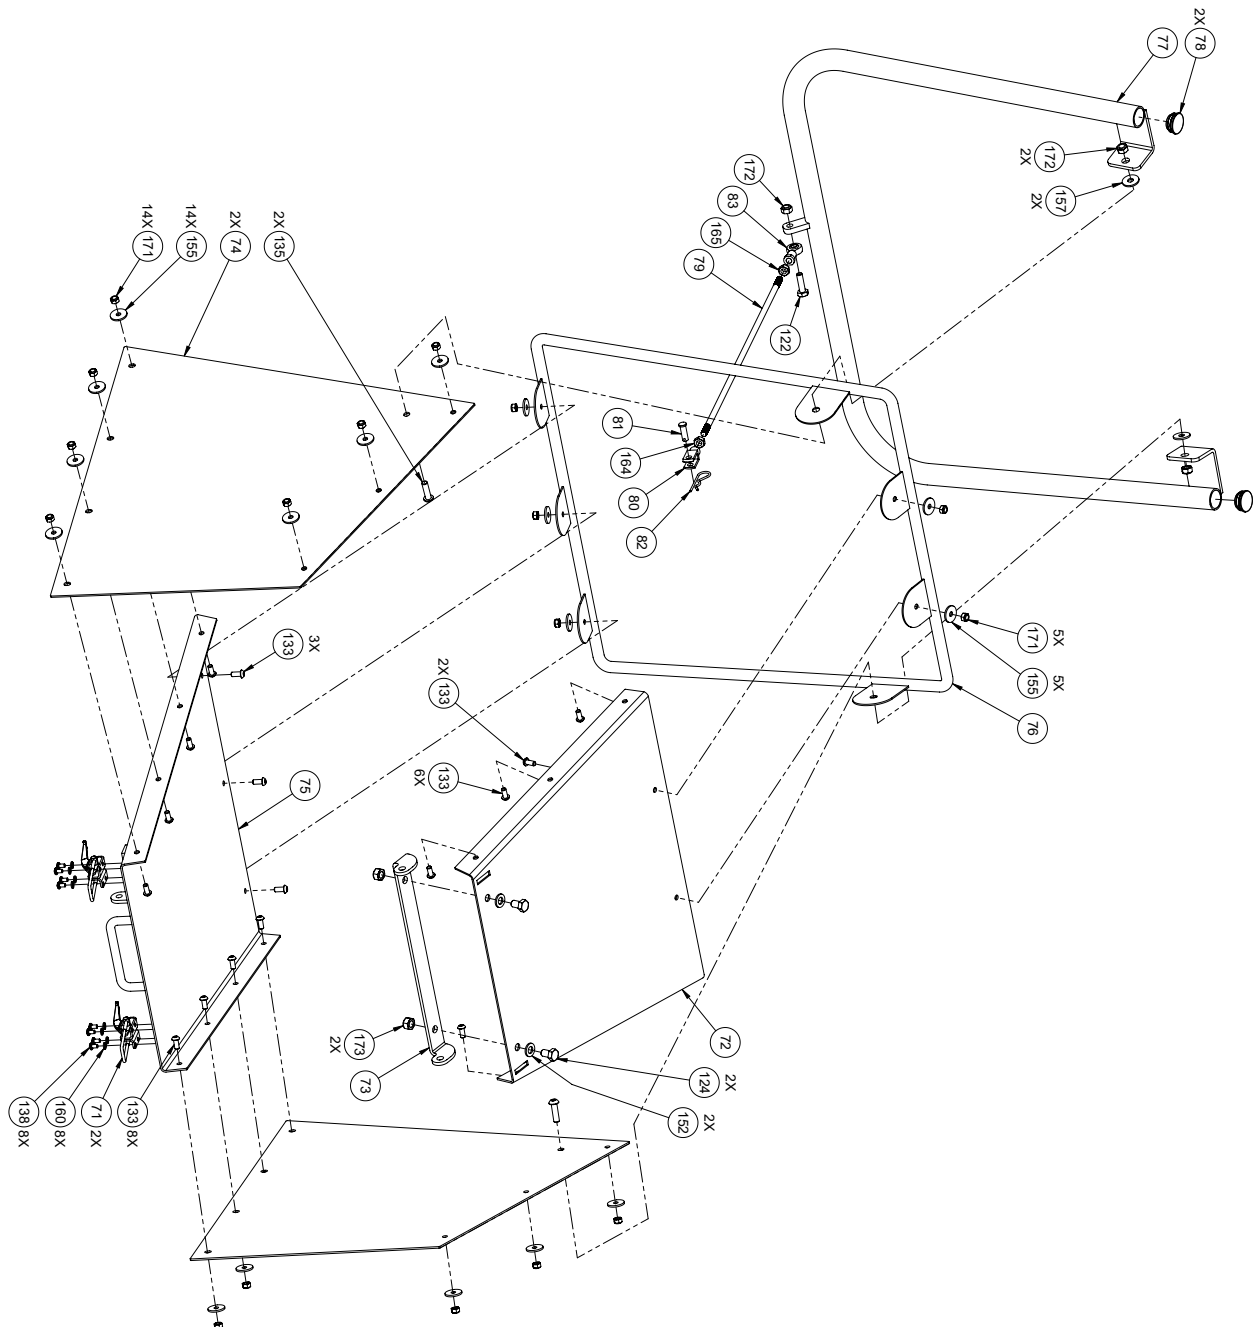


DISCHARGE CHUTE

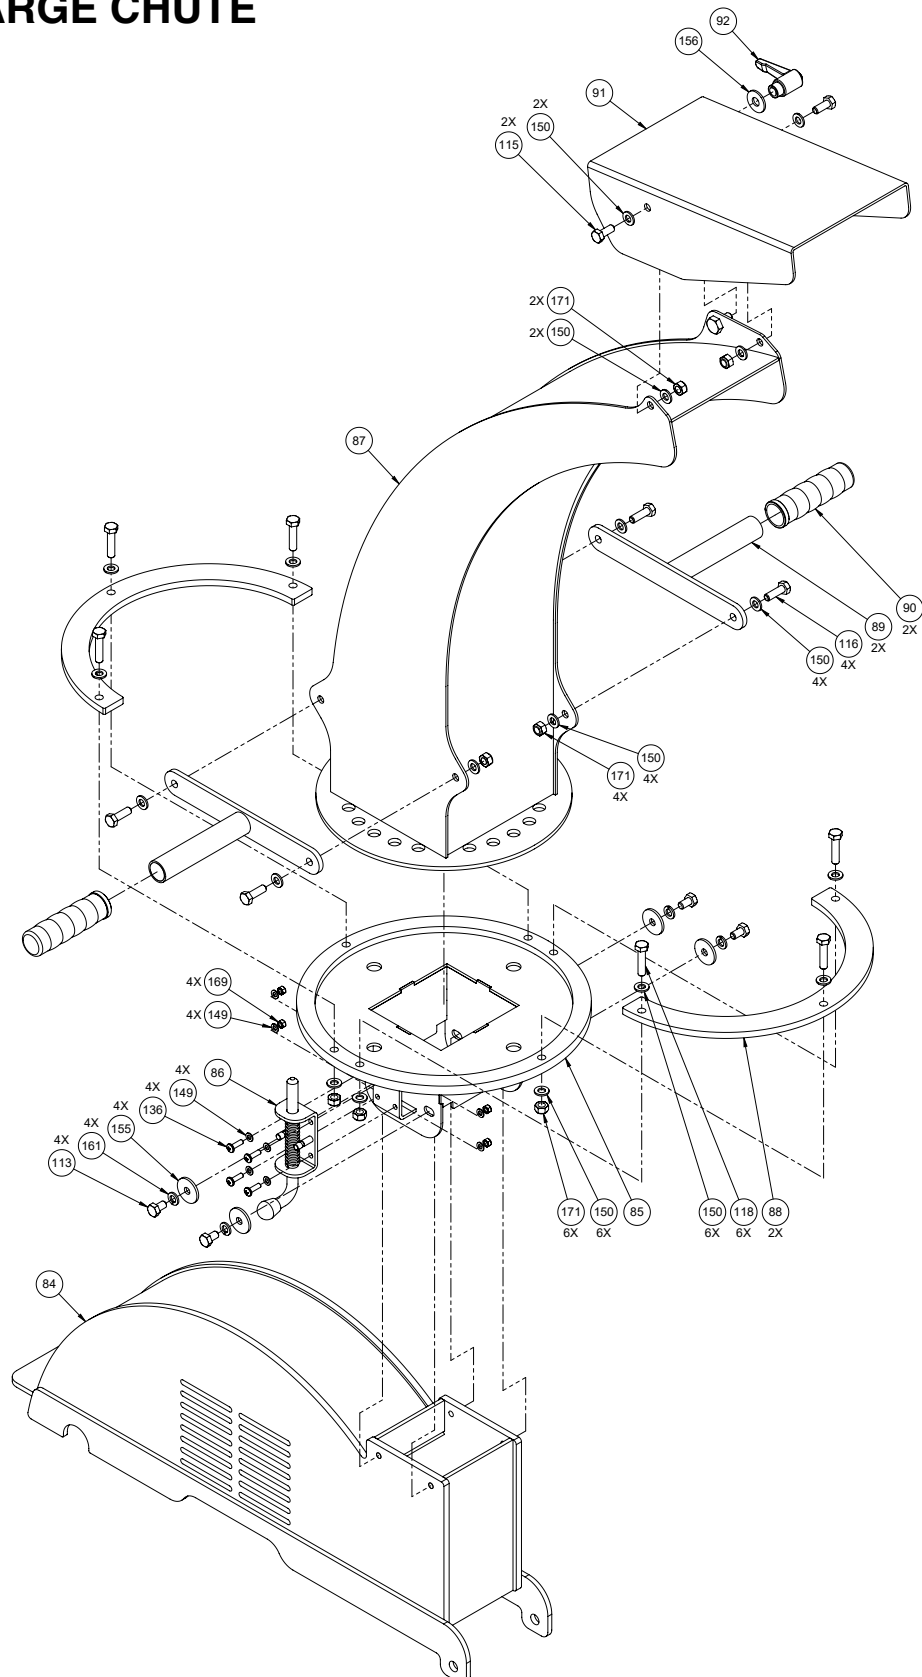




HYDRAULIC LINES

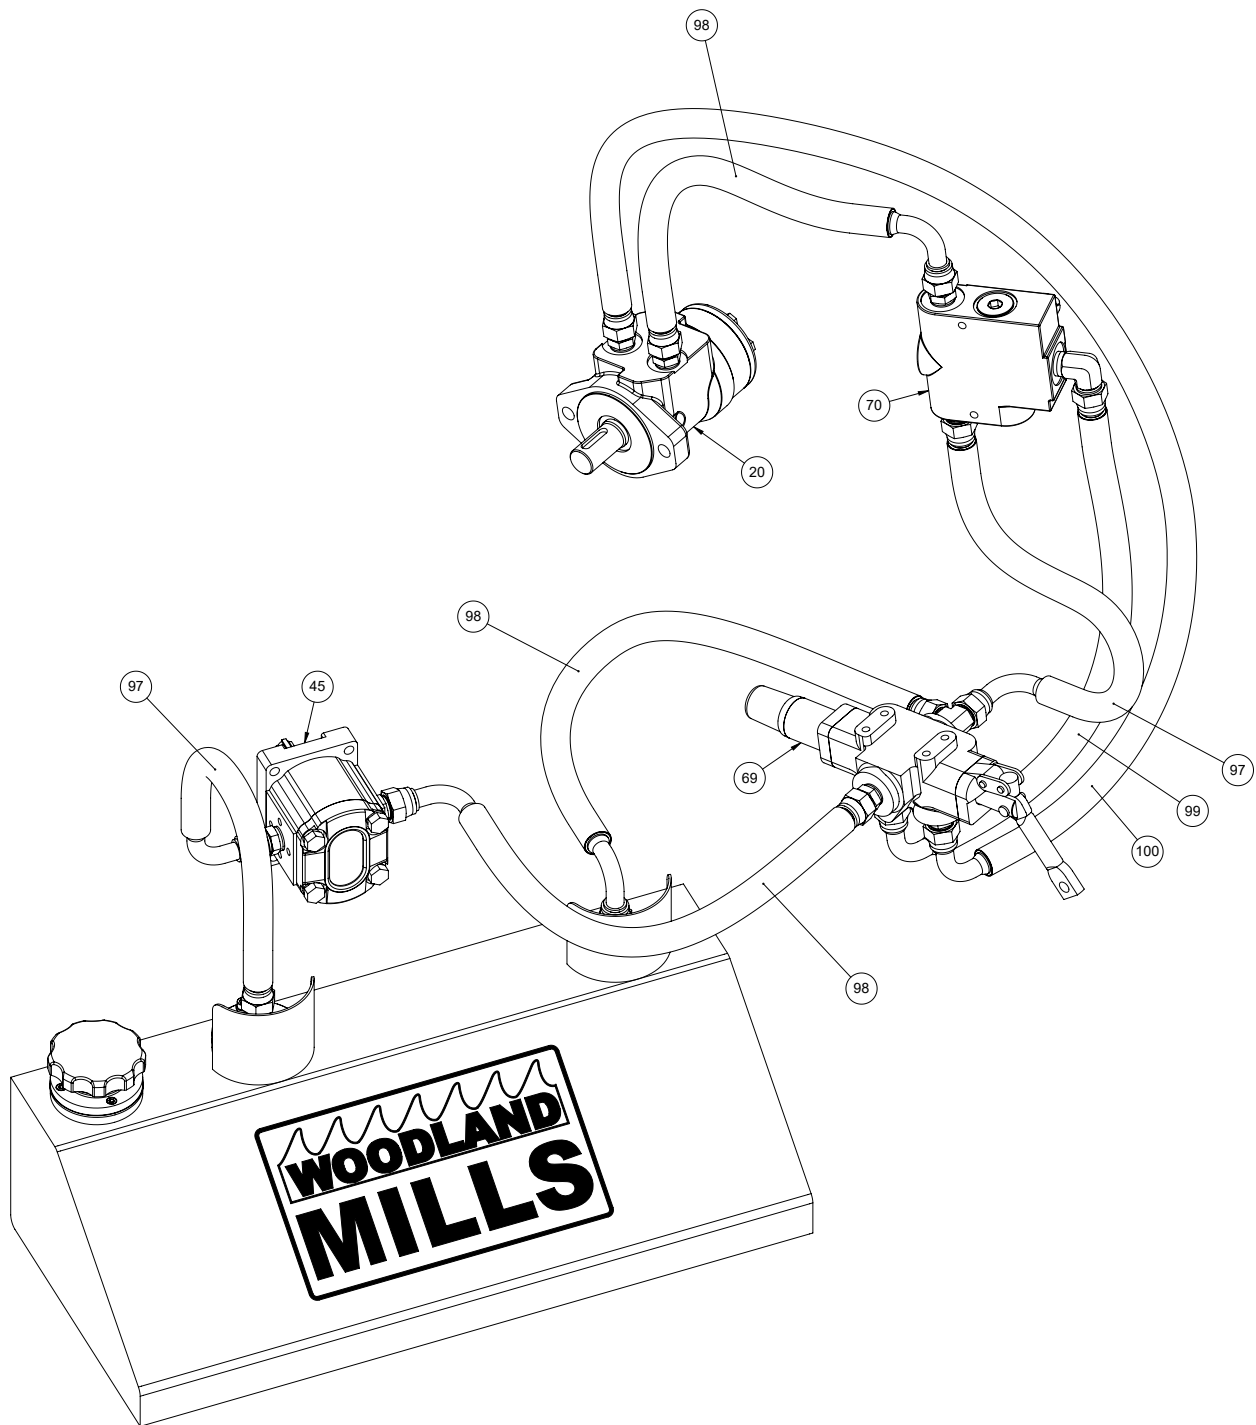

PTO SHAFT

Retaining Clip Kit [Item 101.2] is included with Cover/Retaining Clip Kit [Item 101.1].

Order Item 101.1 if covers are needed as clips are automatically included. Order Item 101.2 if only clips are needed.

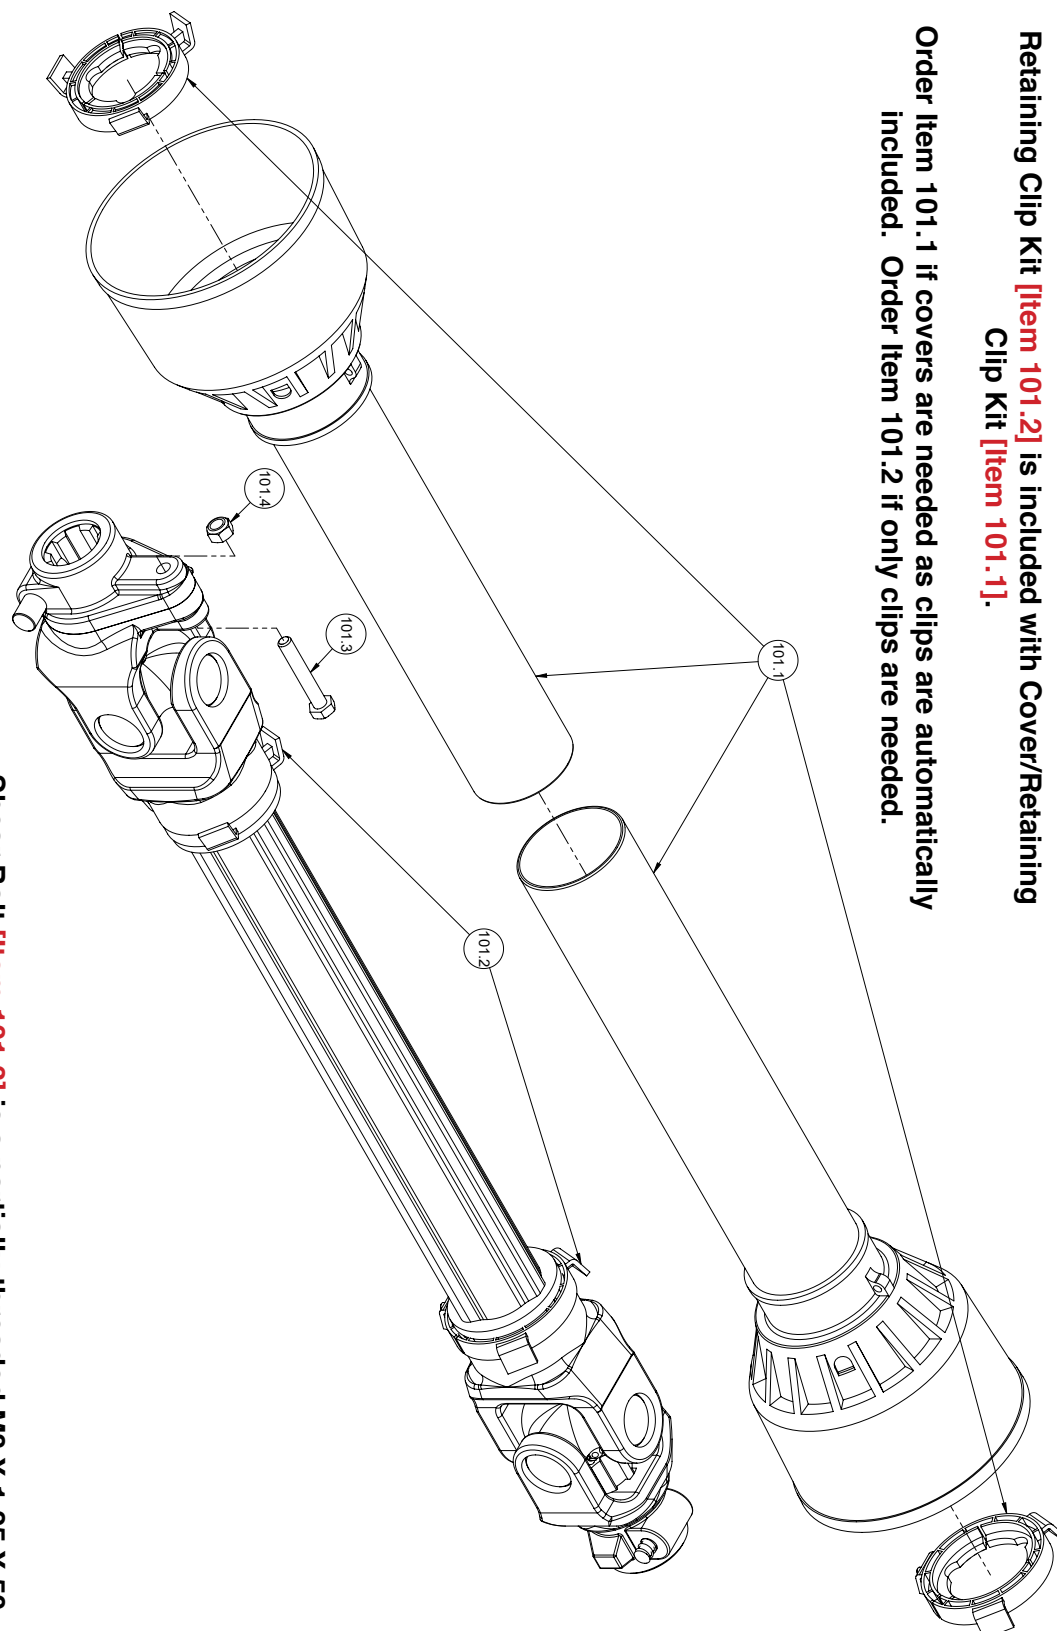

Shear Bolt [Item 101.3] is a partially threaded M8 X 1.25 X 50 mm Class 8.8 hex bolt with an M8 X 1.25 lock nut [Item 101.4].
 Shear Bolt inch equivalent: partially threaded 5/16-18 X 2 in Grade 5 hex bolt with a 5/16-18 lock nut.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Lined area for notes or additional information, consisting of multiple horizontal lines.

This page intentionally left blank.



DISCOVER THE WOODLAND™